

Uputstvo za upotrebu (EN)

SENCOR mašinica za šišanje SHP 8305BK

SENCOR

Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-masinica-za-sisanje-shp-8305bk-akcija-cena/>

SENCOR®

SHP 8305BK



EN ■ Hair Clipper

READ CAREFULLY AND STORE FOR FUTURE USE.

General warnings

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.

Electrical safety

- Do not disconnect the power adapter from the power socket by pulling on the power cord. This could damage the power adapter or the power socket. Disconnect the power adapter from the power socket by pulling on the plug.
- Do not place the power cord of the power adapter over sharp objects. Make sure that the power cord does not hang over the edge of a table and that it is not touching a heated surface.



Attention:

The hair clipper must only be used with the original power adapter that came with it. In order to avoid a dangerous situation from arising, never use a different type of power adapter.

- Never use the power adapter supplied with this hair clipper for any other purposes.
- Keep the power adapter and its power cord dry.
- Do not wind the power cord of the power adapter around the handle of the hair clipper.
- If the power cord of the power adapter is damaged, it must be replaced by the manufacturer, its service technician or by a similarly qualified person, as this will prevent a dangerous situation from arising.
- Do not connect and disconnect the power adapter cord to and from the power socket with wet hands.
- Before connecting the power adapter to a power socket, check that the voltage on its rating label corresponds to the voltage in the power socket to which you wish to connect it. Do not use an extension cord.
- Store, charge and use the hair clipper at an ambient temperature of 15 to 35 °C. Do not charge the hair clipper for longer than is necessary for it to fully charge. Once it is charged, disconnect it from the power socket.

- Do not expose the hair clipper to temperatures higher than 50 °C. Otherwise, the built-in battery could be damaged.
- The hair clipper is equipped with a built-in long-life battery that can only be removed from the hair clipper at a professional service centre. Never attempt to remove it from the hair clipper yourself.



Warning:

Never disassemble the hair clipper for the purpose of removing the battery. Never short circuit the hair clipper or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not charge, use or store the hair clipper or leave it lying in a bathroom or in locations where it could fall into a bath, wash basin or other containers filled with water.
- In the event that the hair clipper falls into water, under no condition reach for it, rather, immediately disconnect the power adapter from the power socket. Never use a hair clipper or power adapter that was submerged in water. Hand it over to an authorised service centre for inspection.



Warning:

Do not use the hair clipper in the bath or shower. Do not clean it under a water tap, do not spray it with water or any other liquid or submerge it in water or any other liquid.

Safety during use

- This hair clipper is intended for home use only and is designed for cutting human hair, beards and nose and ear hair. The hair clipper is not intended for commercial purposes or for trimming animal fur.
- Only use the hair clipper on dry clean hair, beards or nose and ear hair. Do not use it on wet or just washed hair or on beards on which a shaving foam or gel, etc. is applied.
- Use the hair clipper and the individual attachments in accordance with the instructions contained in this user's manual.
- Use only the original accessories supplied with this hair clipper.
- The hair clipper and its power adapter must only be used in indoor areas. Do not use it outdoors.
- Do not use the hair clipper in rooms where aerosol sprays are used or where oxygen is administered.
- Do not expose the hair clipper and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the hair clipper and its accessories near heaters, open fires or other sources of heat.







**Warning:**

Keep the hair clipper dry.


- Before every use, check the cutting unit and attachments for damage. Never use a hair clipper with a damaged cutting unit or attachment.
- The hair clipper may heat up during use or when it is charged. This is completely normal.
- Keep the hair clipper at a safe distance from eyes.
- Always turn off the hair clipper and disconnect it from the power socket when not using it, when leaving it without supervision and before attaching, removing or replacing attachments and before cleaning, maintenance or storage. Store the hair clipper and its power adapter in a dry environment.
- Keep the hair clipper clean. Perform cleaning and maintenance according to the instructions in chapter Cleaning and maintenance.
- Only use the cutting blade lubricating oil in accordance with the instructions in this user's manual and store it out of children's reach. Keep the oil at a safe distance from eyes and sources of heat.
- Do not perform any maintenance on the hair clipper other than cleaning the individual parts of the hair clipper as described in chapter Cleaning and maintenance.
- Never use a hair clipper or power adapter that is damaged in any way.
- Do not use the hair clipper if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.

In order to prevent a hazardous situation from arising, do not repair the hair clipper or any of its accessories yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.


A

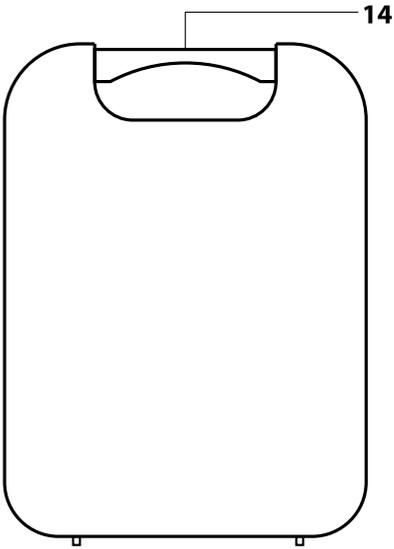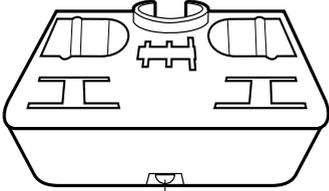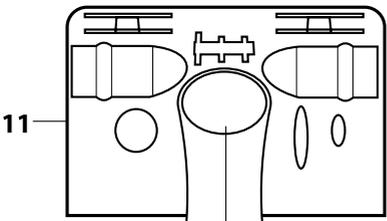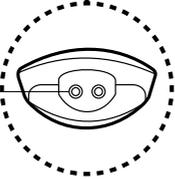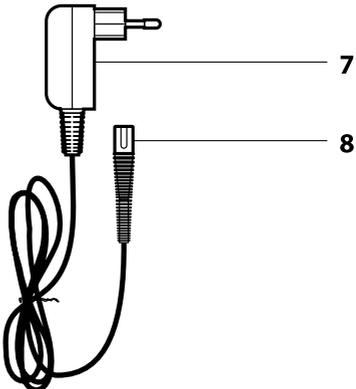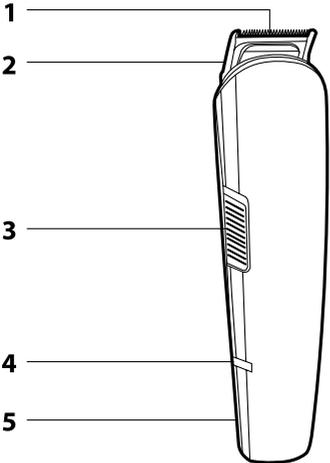


B

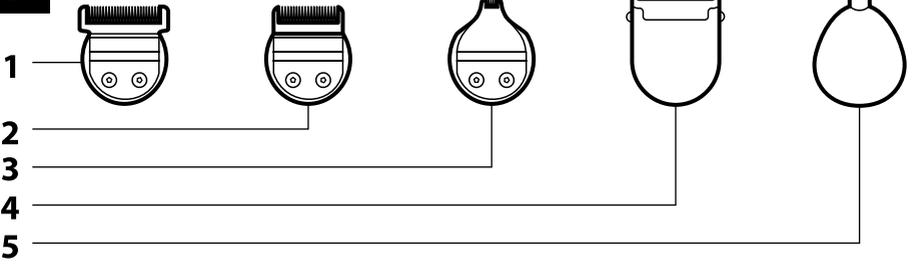


C

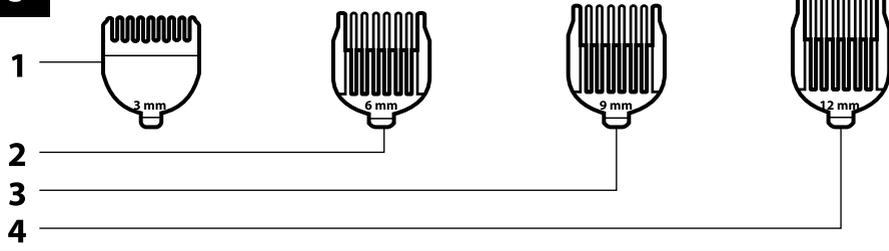


D

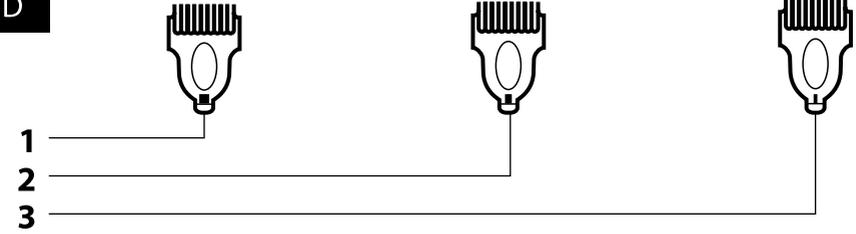


E

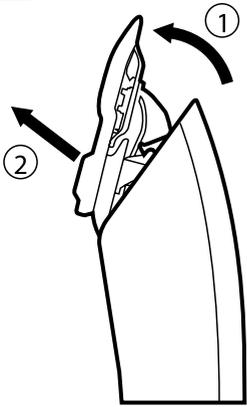

F

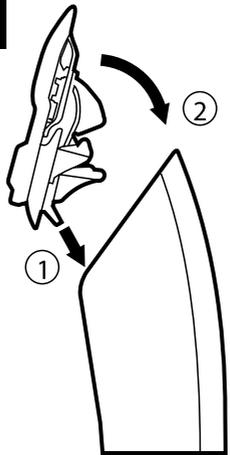

G

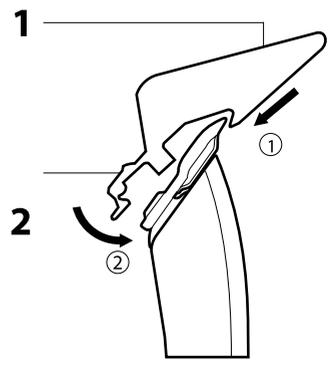

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE HAIR CLIPPER AND ITS ACCESSORIES

A1 Clipper bar	ear hair
A2 Cutting unit	
A3 Hair clipper On/Off switch	C1 Hair cutting comb attachment for cutting height of 3 mm
A4 LED charging indicator	C2 Hair cutting comb attachment for cutting height of 6 mm
A5 Ergonomically-shaped handle	C3 Hair cutting comb attachment for cutting height of 9 mm
A6 Power adapter connection socket	C4 Comb hair cutting attachment for cutting height of 12 mm
A7 Power adapter	
A8 Power adapter plug	
A9 Cleaning brush	
A10 Oil for lubricating the cutting unit	
A11 Hair clipper and accessory stand	D1 Beard cutting attachment, cutting height of 4 mm
A12 Hair clipper charging plug	D2 Beard cutting attachment, cutting height of 6 mm
A13 Hair clipper charging socket	D3 Beard cutting attachment, cutting height of 8 mm
A14 Travel case	
B1 Hair cutting unit, blade width 38 mm	G1 Comp part of attachment
B2 Hair cutting unit, blade width 30 mm	G2 Heel of attachment
B3 Cutting unit for precise trimming	
B4 Cutting unit for fine shaving	
B5 Cutting unit for trimming nose and	

PURPOSE OF USE

- The hair clipper is suitable for cutting dry or lightly dampened hair or beards. The hair clipper is not intended for cutting freshly washed hair, clipping synthetic hair or animal fur. The hair clipper is intended for domestic use and is not intended for business activities or other professional areas of use.

CHARGING THE HAIR CLIPPER

- The hair clipper is equipped with a built-in Lithium-ion battery, which serves as an internal power source and enables cordless operation of the hair clipper. Before first use or after not using it for a long time, first allow the hair clipper battery to fully recharge. Only use the original power adapter **A7** to charge the hair clipper.
- Check that the hair clipper is turned off and insert the power adapter plug **A8** into the socket **A6**. Insert the mains plug of the power adapter into a power socket. The built-in battery will start charging after connecting the hair clipper to a power socket. LED indicator **A4** will start flashing red, which indicates charging. The first charge takes approximately 3 hours. Thanks to rapid charging technology, subsequent charging of the battery to full capacity takes approximately 2 hours.
- As soon as the battery is fully charged, the indicator **A4** will stop flashing and will remain lit. Pull the mains plug of the power adapter out of the power socket and disconnect the power adapter plug from of the hair clipper. After disconnecting the hair clipper from mains power, the LED indicator will turn off.



Attention:

Do not leave the hair clipper connected to the external power source for longer than is necessary to charge it.

- A fully charged battery will provide approximately 1 hour of cordless operation. Then it is necessary to charge the battery again.
- Recommendations for achieving the longest possible battery lifetime:
 - In order for the built-in battery to serve you as long as possible, charge, use and store the hair clipper in a dry environment at an ambient temperature of 15–35 °C. Lower or higher temperatures have a negative impact on the lifespan of the battery.
 - Do not wait for the battery to become completely flat. It is better to charge the battery before it is completely flat.
 - When the hair clipper is not used for an extended period of time, charge it at least once every 6 months.

CHARGING WITH THE STAND

- The supplied stand **A11** also serves as a charging station for the hair clipper. Insert the power adapter plug **A8** into the charging socket **A13** in the stand. Then place the hair clipper on to the charging plug **A12** inside the stand. Charging is signalled by the LED indicator **A4** flashing; this indicator remains lit when fully charged.

DIRECT DRIVE TECHNOLOGY

- The hair clipper is equipped with **DIRECT DRIVE** technology, which enables the hair clipper to be used immediately upon being connected to the mains power socket even when the battery is completely flat. Therefore, it is not necessary to wait for a minimum charge. If the hair clipper stops working due to the battery becoming flat while cutting hair, you can connect it to the mains power grid using the power adapter **A7** and continue cutting.

USING THE HAIR CLIPPER

PREPARATION BEFORE THE HAIRCUT

- Only use the hair clipper on dry clean hair or lightly dampened hair. Do not use it on wet and freshly washed hair or hair with gel applied on to it, etc. Trim beards when they are dry without the use of shaving gels or foams.
- Before starting any styling of hair or beards, acquaint yourself with the operating instructions.
- Seat the person whose hair you will be cutting in such a way that their head is at the height of your chest. This will provide for a comfortable cutting position. Before cutting hair, thoroughly comb out the hair in the growth direction.
- Cover the neck and shoulders of the person whose hair you will be cutting with a towel to limit cut hair from falling on their clothes.
- Before every use, check the selected cutting unit or attachment for damage. Never use a hair clipper with a damaged cutting unit or attachment.

TURNING THE HAIR CLIPPER ON AND OFF

- Turn on the hair clipper using switch **A3**.
- When you have finished using it, always turn the hair clipper off using switch **A3** and disconnect it from the power socket if it was powered from a mains power socket. Then clean it out according to the instructions in chapter Cleaning and maintenance.



Attention:

The maximum continuous operating time of the hair clipper is 1 hour, so do not leave it running for longer. If the hair clipper was in continuous operation for 1 hour, allow it to cool down for at least 30 minutes before turning it on again. At lower loads, a cooling time of 3 to 5 minutes is usually sufficient.

ATTACHING AND REMOVING THE CUTTING UNITS

- In the event that an attachments is attached to the current cutting unit, then first take it off.
- Remove the current cutting unit from the hair clipper, see figure E. Hold the hair clipper in one hand so that your thumb is positioned on the underside of the cutting unit. Use the thumb of the other hand to push the cutting unit from the handle **A5** until the cutting unit is fully released.



Attention:

The edges of the cutting units **B1** to **B3** are sharp, pay increased attention when handling them.

- Select a different cutting unit and attach it back on to the handle of the cutting unit **A5**, see figure F. Insert the tab on the underside of the selected cutting unit into the cut-out in the handle and then push the cutting unit against the hair clipper until you hear an audible click.

ATTACHING AND REMOVING COMB ATTACHMENTS AND BEARD CUTTING ATTACHMENTS

- The hair clipper is supplied with comb attachments **C1** to **C4** and beard cutting attachments **D1** to **D3** for various cutting heights. Information about the cutting height is shown on each of the attachments. Select one of the attachments and attach it an appropriate cutting unit **B1** or **B2** according to the instructions below.



Attention:

Put the comb attachments and beard cutting attachments on to the cutting unit before turning on the hair clipper and always turn the hair clipper off before removing them.

- First slide the comb part **G1** on to the cutting blade from above and then push down the heel of the attachment **G2** on to the bottom part of the cutting unit, see figure G. Correct attachment of the attachments is accompanied by an audible click. Check that the selected attachment is securely fitted to the cutting unit.
- To remove the comb attachment, first release the heel of the comb attachment **G2** and then slide the attachment off the cutting unit.

CUTTING HAIR

- To cut hair, use either the cutting unit **B1** independently or the cutting unit **B1** with one of the comb attachments **C1** to **C5**. You can use the hair clipper without the comb attachment for cutting hair very close to the scalp, for trimming the neck line and the area around the ears or for cutting over a comb or fingers.



Attention:

The blade of the cutting unit **B1** will cut off all hair or whiskers that come into contact with it, therefore be especially careful when handling the hair clipper while it is running.

TRIMMING A BEARD

- To trim a beard, use either the cutting unit **B2** independently or the cutting unit **B2** with one of the attachments **D1** to **D4**. Use the cutting unit without an attachment to significantly shorten beards or for trimming a beard under the nose or for styling sideburns.

STYLING BEARDS

- To finish styling a beard, use the cutting unit **B3**. The unit effectively cuts very short whiskers of approximately 1 mm in length.
- Be careful when styling because the cutting unit will remove every whisker that it comes into contact with. Hold the hair clipper in such a way that the unit is in contact with the skin. Do not exert too much pressure on the skin. Style the beard on the required parts of the face using light and slow strokes until the required beard shape is achieved.

SMOOTHING OR REPAIRING BEARD CUTS

- To smooth out or repair beard cuts, use the cutting unit **B4**. The unit consists of a flexible shaving foil and is intended only for the final shave in the area of the contours around moustaches, goatees and sideburns.

TRIMMING NOSE AND EAR HAIR

- To trim hair inside the nose and ears, use cutting unit **B5**. Slowly place the unit against the nasal or ear opening. Carefully move the unit in and out of the nasal or ear opening while at the same rotating it until the required hair is removed.



Attention:

Never insert the cutting unit **B5** deeper than 5 mm into the nose or ear.

ADVICE AND TIPS

- If you do not have experience with the hair clipper, start by cutting only with the highest attachment on the cutting unit and gradually attach the attachments for a lower hair or beard cutting height.
- Record the cutting units or attachments used for certain hairstyles so that you do not need to spend time adjusting it the next time.
- It is most effective to cut counter to the direction of hair growth.
- Because hair grows in various directions, it is also necessary to move the hair clipper in various directions (upwards, downwards or crosswise).
- Repeat individual passes so that you cut also the hair that you did not cut in the previous passes.
- Ensure that the flat part of the attachment is in full contact with the scalp. This will ensure an even haircut result.
- To achieve good results on curly, sparse or long hair, you can try using a comb to lead the hair towards the hair clipper.
- Trim beards by slowly moving counter to the growth direction of the beard, going from the bottom upwards. When trimming beards using an attachment, keep in mind that the selected attachment must be in constant contact with the skin in order to ensure an even cut.
- Regularly clean away hair and whiskers from the cutting units. In the event that a large amount of hair or whiskers accumulates in the cutting blade, take it off the hair clipper and blow or tap the hair or whiskers out of it.

CLEANING AND MAINTENANCE

- Regular cleaning of the hair clipper after every use will ensure its proper operation.
- Before you start cleaning the hair clipper, turn it off and disconnect it from the power socket.
- The hair clipper handle can be cleaned using a clean dry cloth. In the event that it is very dirty, you can use a lightly dampened cloth. Then thoroughly wipe the cleaned surface dry.
- To clean the power adapter, use a clean, dry cloth.
- For cleaning, do not use brushes with hard bristles, cleaning products with an abrasive effect, solvents, etc. Otherwise, the cleaned surface may be damaged.



Attention:

This hair clipper is not designed to be washed under a water tap. Do not spray the hair clipper or its power adapter with water or any other liquid or submerge it in water or any other liquid.

CLEANING THE CUTTING UNITS

- In the event that an attachments is attached to the current cutting unit, then first take it off.
- Use the cleaning brush **A9** to remove all hair and whiskers from the cutting unit.
- Remove the cutting unit from the hair clipper, see figure **E**. Hold the hair clipper in one hand so that your thumb is positioned on the underside of the cutting unit Use the thumb of the other hand to push the cutting unit off the handle hair clipper until the cutting unit is fully released.



Attention:

The edges of the cutting units **B1** to **B3** are sharp, pay increased attention when handling them.

- Use the brush to remove all hair or whiskers from the cutting unit and from the inner area of the hair clipper underneath the cutting unit.
- After cleaning it, attach the cutting unit back on to the handle of the hair clipper, see figure **F**. Insert the tab on the underside of the cutting unit into the cut-out in the handle of the hair clipper and then push the cutting unit against the hair clipper until you hear an audible click.

CLEANING THE COMB ATTACHMENTS AND BEARD CUTTING ATTACHMENTS

- The comb attachments and beard cutting attachments can be washed under lukewarm running water. After washing an attachment, carefully wipe it with a soft, dry cloth and then allow it to dry naturally.

LUBRICATING THE BLADE OF THE CUTTING UNITS

- To ensure complete movement of the cutting unit blades **B1** to **B3**, it is recommended that they be regularly lubricated always after several sessions.
- If an attachment is mounted on the cutting unit, remove it.
- Apply 1 to 2 drops of oil **A10** to the blades of the cutting units and evenly spread the oil using a cloth. Dry off excess oil. Check that the cutting blade is clean before using again.



Note:

After using up the supplied oil **A10** you can use an oil that does not contain acids, e.g. sewing machine oil.

STORAGE

- After you have finished using the hair clipper, you may store it with all its accessories either in the supplied stand **A11** or in the supplied case **A14**. Keep the stored hair clipper and its accessories away from extreme temperatures, direct sunlight and excessive humidity and do not store it in an overly dusty environment.

TECHNICAL SPECIFICATIONS

Hair clipper

Built-in battery.....	Li-ion, 5 V
Input.....	5 V, 1 A
Dimensions (width x depth x height)	145 x 30 x 38 mm
Noise level	72 dB(A)

Power adapter

Rated voltage range	100–240 V AC
Rated frequency.....	50–60 Hz, 0.2 A
Output	5 V/DC, 1,000 mA
Length of the power cord.....	195 cm

The declared noise emission level of the appliance is 72 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

EXPLANATION OF TECHNICAL TERMINOLOGY

Safety class for electrical shock protection:

IP20 – The appliance is constructed in such a way that it is not possible for any dangerous live parts of the appliance to come into contact with the human body and at the same time the appliance is protected against the damaging effects of water that could enter into the appliance.

Changes to text and technical parameters are reserved.

DISPOSAL OF USED BATTERIES

Prior to handing over the hair clipper at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Battery removal will be performed at the authorised service centre. In the event that the product has been disassembled for the purpose of ecological disposal then it must not be reassembled.



This symbol indicates that used batteries do not belong in ordinary municipal waste. Hand over used batteries to designated collection points for proper disposal. Correct disposal of batteries will help prevent negative impacts on the environment and human health.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of used batteries, request the necessary information about the correct disposal method from the local authorities or from your vendor.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper

waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-masinica-za-sisanje-shp-8305bk-akcija-cena/>