

## Uputstvo za upotrebu (EN)

SENCOR rešo SCP 2256SS

The SENCOR logo is displayed in a bold, red, sans-serif font. The letters are thick and closely spaced, with a slight shadow effect behind them, giving it a three-dimensional appearance. The logo is centered horizontally within a white trapezoidal shape that tapers to the right.

Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-reso-scp-2256ss-akcija-cena/>

# SENCOR®

SCP 2256SS  
SCP 1506SS





ELECTRIC HOTPLATE  
Translation of the original manual



**SENCOR®**

**SCP 2256SS  
SCP 1506SS**

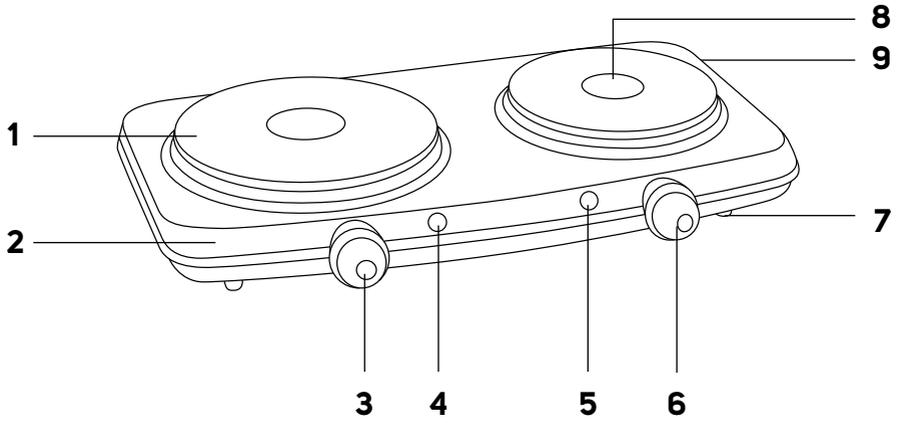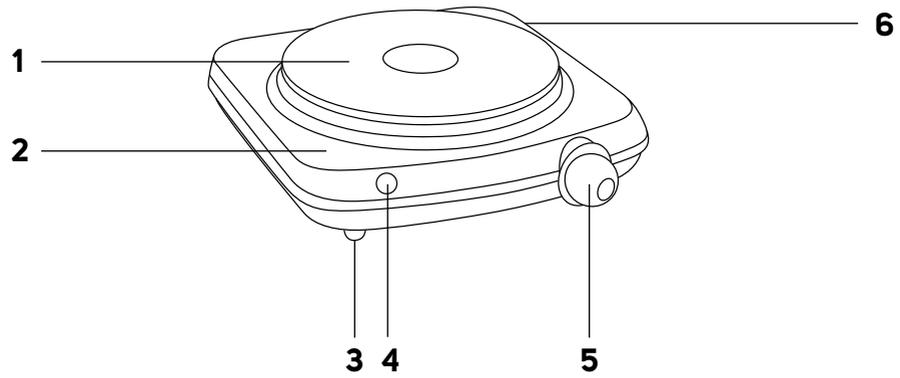

**A****B**

# EN Electric Hotplate

## Important Safety Instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 years and supervised.
- Children under 8 years of age must be kept away from the appliance and its power cord.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cable damaged.



#### **CAUTION:**

Hot surface. The temperature of accessible surfaces may be higher if the appliance is in operation.



#### **WARNING:**

If the surface of the appliance is cracked, switch it off to prevent possible electric shock.



## CAUTION:

This appliance is not designed to be controlled using an external timer switch or a remote control.

When cleaning, follow the instructions in the chapter “Cleaning and Maintenance”.

- This appliance is intended for household use only. It is also suitable for personal non-commercial use in spaces such as:
  - staff kitchenettes in stores, offices and other workplaces;
  - recreational objects, chalets, cottages;
  - hotel or motel rooms and other living areas;
  - Bed & Breakfast facilities.
- Do not use the appliance in outdoor or industry environment.
- The appliance is designed for heating and preparing food. Do not use it for any other purposes than those for which it was designed.
- Before connecting the appliance to a power socket, check that the nameplate rated voltage matches the voltage of the power socket the appliance is to be connected to. Connect the appliance only to a properly earthed socket. Do not use an extension cord. Before use, fully extend the power cord.
- Only use the appliance on flat, dry, clean, stable and fire-resistant surface. Do not use the appliance on metal surfaces, such as on the kitchen sink drainage board.
- Do not place the appliance on or near table edge, electric or gas stove or other sources of heat.
- Do not use the appliance on a surface which is heat-sensitive or covered with table cloth, paper or other flammable material, in the vicinity of curtains or other flammable or heat-sensitive materials.
- During operation there needs to be sufficient area for air circulation above the appliance and around it. A safety distance of at least 50cm and 10cm must be observed over the hotplate in the main heat radiation direction and in other directions around the appliance respectively.
- During operation, the appliance must be placed on the kitchen unit countertop with no cabinet or overhanging shelf over itself.
- Do not place any objects on the appliance.
- Do not cover or block the ventilation openings of the appliance.
- Do not use the appliance without any pot or pan put on the hotplate. During operation, regularly check the food status.
- Always make sure that the pot or pan are placed correctly on the hotplate.
- The dish handles should be in a safe position to prevent getting caught on and overturning the dishes.
- Liquids or meals may not be heated in closed containers, such as cans, as an explosion could result.
- Take special care if oil or fat is used for cooking. If fat or oil is heated to a high temperature, it may catch fire.
- When handling hot dishes containing hot food or liquids, take special care to prevent burning or scalding.
- Use oven mitts when handling hot dishes.
- The appliance must not be left unattended while in operation or connected to a power socket.
- Keep in mind that the hotplate will still radiate some residual heat for a while after use. Take care not to touch the hot surface of the appliance.
- After use, always switch the appliance off using the on/off button and disconnect the appliance's power cord from the power socket. Take this action also if the appliance is to be left unattended, unused or before cleaning, maintenance, moving or storage.
- When disconnecting the appliance from the power socket, always pull the plug, not the power cord. Otherwise, damage to the power cable or the socket may occur.
- Allow the appliance to fully cool down before moving, cleaning, maintenance or storage. Never move the appliance during operation, while there is a pot or a pan on it or if it's not cooled down completely.
- To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.
- Do not place heavy objects on the power cord. Make sure that the power cable does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Clean the appliance regularly after each use according to the instructions in the Cleaning and Maintenance section. Do not perform any maintenance on the appliance other than the cleaning described in this user's manual.
- Do not use the appliance if it malfunctions, has been dropped on the floor, immersed in water or damaged in any way. Take it to an authorised service centre for inspection or repair.
- To prevent dangerous situations, do not repair or modify the appliance yourself. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

### DESCRIPTION OF THE DOUBLE HOTPLATE (SCP 2256SS)

<b>A1</b> Hotplate, Ø 18 cm	<b>A7</b> Antiskid feet
<b>A2</b> Double hotplate base	<b>A8</b> Hotplate, Ø 15 cm
<b>A3</b> Left hotplate temperature controller	<b>A9</b> Main switch (located on the side)
<b>A4</b> Left hotplate indicator light	
<b>A5</b> Right hotplate indicator light	
<b>A6</b> Right hotplate temperature controller	

### DESCRIPTION OF THE SINGLE HOTPLATE (SCP 1506SS)

<b>A1</b> Hotplate, Ø 18 cm	<b>A5</b> Temperature controller
<b>A2</b> Single hotplate base	<b>Main switch (located on the side)</b>
<b>A3</b> Antiskid feet	
<b>A4</b> Indicator light	

### BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Wipe the surface of the appliance with a clean, slightly damp cloth. Then wipe it dry.



#### Note:

When first turned on there may be light smoke emitted. This is a completely normal phenomenon that disappears in a few minutes.

### OPERATING THE APPLIANCE

1. Place the appliance on a kitchen worktop or table within easy reach of a power socket. When doing so, make sure that all safety instructions are followed.



#### Warning:

The appliance must not be placed on a hob, cooker, gas cooker, etc.

2. Check that there are no foreign objects on the hotplate and that the surface is clean.
3. Unwind the power cord completely and connect it to the power socket.



#### Note:

The power cord must be positioned so that it does not touch the surface of the appliance, as the appliance heats up during operation.

4. Place the pot or pan on the hotplate. To achieve optimal energy consumption and cooking time, use cookware with a flat base, the

diameter of which corresponds to the size of the hotplate. Place food into the pot or pan.

5. Switch the main power switch to position I (on).
6. Use the temperature controller to set the desired temperature level. For quick boiling, use the highest setting MAX, for frying we recommend setting level 5, for maintaining the boil set the medium setting 3 to 4 and for keeping the food warm use the low setting 1 to 2. You may change the temperature setting at any time during operation so that it meets your needs. During operation, the thermostat is switched on and off to maintain the set temperature. The hotplate indicator light indicates that the thermostat is switched on and off.
7. During operation, regularly check the food status. Do not leave the appliance unattended while operating.
8. When the food is ready, set the temperature controller to MIN position, switch the main switch to position O (off) and disconnect the power cord from the power socket.
9. Allow the appliance to cool down completely. Regularly clean the cooker according to the instructions in the chapter Cleaning and Maintenance. Never move the appliance until it's cooled down completely.

### CLEANING AND MAINTENANCE

- Clean the appliance after every use. Make sure that dried food residues or other impurities do not accumulate on it.
- Set the temperature controller to MIN position, switch the main power switch to position O (off) and disconnect the power cord from the power socket.
- To clean the hotplate, use a soft, slightly dampened sponge and then wipe dry.
- Clean the surface around the hotplate with a soft, lightly dampened sponge. In case of heavy soiling, use a small amount of neutral dishwashing detergent. Remove any detergent residue with a clean, lightly dampened cloth. Then wipe the cleaned surface thoroughly dry.
- Do not use wire wool, thinners, abrasive cleaners, etc. to clean the appliance. Otherwise, the appliance's finish may be damaged.



#### Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.



#### Note:

After a certain period of use, the colour of the surface of the appliance may change. However, this does not affect the operation of the appliance.

#### Storage

If the appliance will not be used for an extended period, unplug it from the power socket, let it cool down, and clean it following the instructions provided above. Before storing, make sure that the appliance is clean and dry. Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

.....

## TECHNICAL SPECIFICATIONS

### SCP 2256SS

Rated voltage range.....	230 V~
Rated frequency.....	50 Hz
Rated input power.....	2,500 W
Plate diameter.....	18 cm (left) / 15 cm (right)
Dimensions.....	470 × 275 × 80 mm
Weight.....	3.4 kg

### SCP 1506SS

Rated voltage range.....	230 V~
Rated frequency.....	50 Hz
Rated input power.....	1,500 W
Hotplate diameter.....	18 cm
Dimensions.....	247 × 283 × 81 mm
Weights.....	2.1 kg

We reserve the right to change the text and technical specifications.

.....

## INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED

### PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.

For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this

product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

#### For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

#### Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product complies with all the essential requirements of the applicable EU directives.



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-reso-scp-2256ss-akcija-cena/>