

Uputstvo za upotrebu (EN)

SENCOR vaga SBS 2475WH

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-vaga-sbs-2475wh-akcija-cena/>

SENCOR®

SBS 2475WH
SBS 2476BK



PERSONAL SCALE

Translation of the original manual



SENCOR®

SBS 2475WH
SBS 2476BK



A

1


70.2
kg

SENCOR

2

3

4

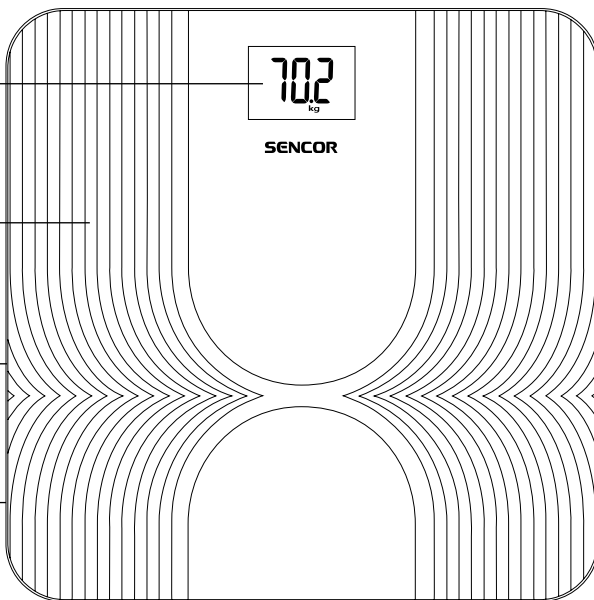

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- The appliance is designed for use at home, in offices and similar types of areas. Do not use it for commercial, medical or other purposes.
- This appliance may be used by children and persons with reduced physical, sensory or mental abilities or with insufficient experience and knowledge if they are properly supervised.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not use the appliance outdoors, do not locate it on unstable surfaces, on electric or gas cooktops, in the vicinity of an open flame or other sources of heat.
- Do not expose the appliance to direct sunlight or high humidity and do not use it in an excessively dusty environment.
- Make sure that the appliance is located on an even, smooth, hard and stable surface. This applies especially when using the appliance. Otherwise, this may result in weighing inaccuracies.
- Do not use the appliance in the vicinity of a strong electromagnetic field.
- Prior to stepping on the weighing platform, check that it not damp and that your feet are not wet. Otherwise, this presents a slipping hazard.
- Do not jump on the appliance and do not exceed its maximum weighing capacity. Otherwise, it could be damaged.
- Do not use the appliance as a place for placing items. Store it in a horizontal position and ensure that no items are placed on it.
- If you decide that you will not use the appliance for an extended period of time, remove the batteries. If the batteries were to leak into the inner area of the appliance, this could damage it.
- Always use new batteries of the same type. Never combine used and new batteries or various types of batteries. Never put the batteries in a fire, short circuit them or damage them in any way. Dispose of them ecologically at the end of their lifetime. Never throw batteries out with communal waste.
- Do not use rechargeable batteries to power this appliance.
- Keep the batteries out of children's reach as they may present a hazard to a child. In the event that a child swallows a battery, immediately seek medical help.
- Keep the appliance clean. When cleaning, follow the instructions in chapter "Cleaning and maintenance". Do not submerge the appliance under water or any other liquid and do not rinse it under running water.
- Do not repair the appliance yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE SCALE

- A1** Display
- A2** Standing platform of the scale
- A3** Battery compartment (on the underside of the scale, not shown)
- A4** Weight unit toggle switch (located on the underside of the scale, not shown)

POWER SOURCE

- This scale comes with two AAA batteries (2x 1.5 V). The battery is already installed in the battery compartment located on the underside of the scale, however, during transport it is protected by an insulating strip to prevent it from discharging before reaching the end customer and damaging the appliance. To use the scale, remove the insulating strip.
- When the display shows "Lo", it is necessary to replace the battery with a new one.
- Remove the battery compartment cover and take out the flat battery. Insert a new battery of the same type. Ensure correct polarity as shown at the bottom of the battery compartment and put on the cover.

USING THE SCALE

- Place the scale on an even, smooth, hard and stable surface. Do not place it on a carpet or any other soft surface, otherwise the measurement results may be inaccurate.
- Stand on the scale. When weighing yourself, stand still and do not lean. The measured value will start flashing on the display.
- The scale will automatically turn off after several seconds of inactivity.
- In order to ensure comparable results, it is important that you weigh yourself at the same time of day, ideally in the morning. The weighing results may be influenced by various factors, e.g. the clothing that is worn or the food and drink that you consume before weighing yourself.

Weight unit selection

- The weight unit toggle switch is located on the underside of the scale. Select the required weight unit: kg – lb – st.

Error messages

Error message	Meaning	Solution
Err	Overload	The maximum weighing capacity of the scale is exceeded. Carefully step off the scale.
Lo	Low battery power level.	Replace the batteries with new ones.

CLEANING AND MAINTENANCE

- To clean the scale, use a soft sponge lightly dampened in warm water. Wipe dry using a clean wiping cloth.
- For cleaning, do not use steel wool, cleaning products with an abrasive effect, solvents, etc. Otherwise, the surface of the appliance may be damaged.
- Do not submerge the scale under water or any other liquid and do not rinse it under running water.

TECHNICAL SPECIFICATIONS

Power supply	2x AAA batteries (2x 1.5 V)
Weighing capacity	2-180 kg / 4,4 - 396 lb
Weighing precision	100 g / 0,2 lb
Unit selection	kg / lb / st

We reserve the right to change the text and technical specifications.

Disposal of used batteries



Batteries contain environmentally damaging compounds and, therefore, do not belong in standard communal waste. Hand over used batteries for proper disposal at locations intended for their collection.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-vaga-sbs-2475wh-akcija-cena/>