

Uputstvo za upotrebu

SENCOR fen SHD 8600BK

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-fen-shd-8600bk-akcija-cena/>

SENCOR®

SHD 8600BK



SMART HIGH SPEED HAIR DRYER

Translation of the original manual

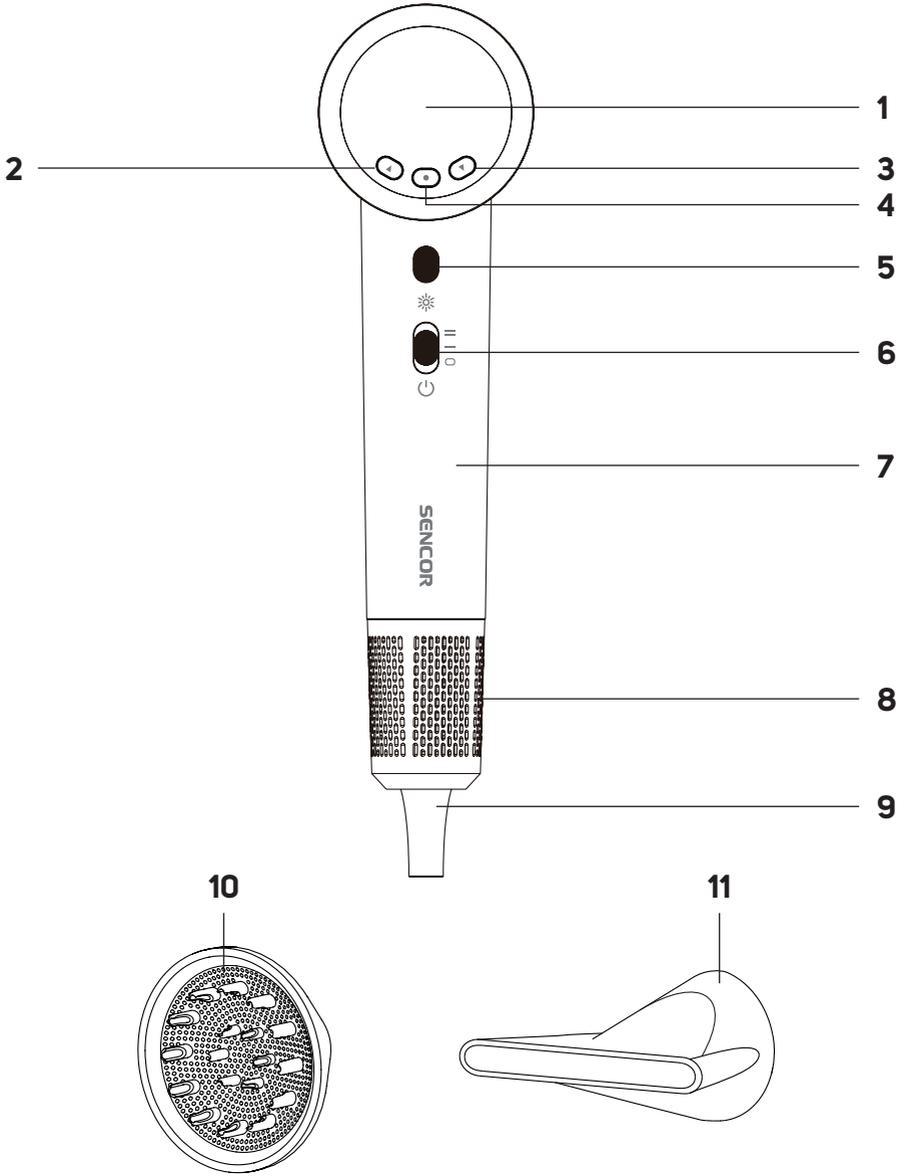


SENCOR®

SHD 8600BK



A



IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children without supervision.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cord is damaged.

**Warning:**

Do not use this appliance near water.

**Warning:**

Do not use this appliance near baths, showers, washbasins or other containers containing water.

- If the appliance is used in the bathroom, unplug it from the socket after use by removing the plug from the socket, as the presence of water poses danger, even when the appliance is turned off.

- To insure additional safety, it is recommended to install a Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask the electrician for advice.

ADDITIONAL IMPORTANT SAFETY INSTRUCTIONS FOR USE OF THE APPLIANCE

- Carefully unpack the product and take care not to throw away any part of the packaging until all the product parts have been identified.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Never use accessories which have not been supplied with this appliance or which are not designed for this appliance.
- Make sure that the power cord and plug cannot come into contact with water or dampness.
- Do not spray the product with water or any other liquid. Do not submerge this appliance and any of its components in water or any other liquids.
- This product is designed for household use. Do not use it in industrial environment or outdoors!
- Do not use sprays in the vicinity of the appliance.
- If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving the appliance, proceed in the same manner.
- Make sure the appliance is fully cold before storing.
- Do not expose sensitive people or animals to hot air.
- Do not place the appliance on or near an electrical or gas stove. Do not place the device within near heat producing devices such as fireplaces etc.
- Do not use attachments other than those supplied or specified by the manufacturer.
- Do not use the appliance if it has a damaged power cord or power plug.
- In no case should you attempt to repair the appliance yourself; do not make any modifications to it – danger of electric shock! Entrust all repairs and adjustments of this device to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot places or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling the power cord – it may damage the power cord / power socket. Disconnect the cable from the power socket by gently pulling the plug of the power cord.
- Do not use the product for any other purposes than those intended.
- Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
- Ensure that no hair or threads remain in any of the openings of the hair dryer.
- The manufacturer is not responsible for damages caused by the incorrect use of this product or its accessories (food spoilage, injuries, burns, scalding, fire, etc.).

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



Safety Class for Electric Shock Protection:
Class II – Electric shock protection is provided by double or heavy-duty insulation.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

DESCRIPTION OF THE HAIR DRYER

- | | |
|--|---------------------------|
| A1 Display | A7 Dryer handle |
| A2 ▲ button | A8 Air inlet grill |
| A3 ● button | A9 Power cord end |
| A4 ▼ button | A10 Diffuser |
| A5 ❄️ Cold air button | A11 Concentrator |
| A6 On/Off switch and speed switch | |

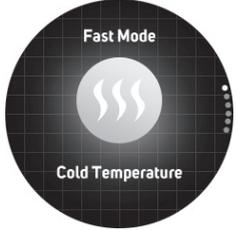
BEFORE FIRST USE

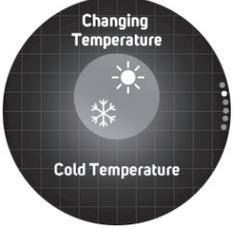
- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.

USING THE HAIR DRYER

- Plug the power cord into the mains socket.
- Move the switch up to I position. The dryer starts at low speed.
- Move the switch up again to the II position. The dryer will start at high speed.
- Press the ● button repeatedly to select one of the preset modes – see table below.
- To set the temperature use the ◀ or ▶ buttons.
- If you need to select cold air, press the ❄️ cold air button.
- When you have finished using it, slide the switch down to the O (off) position. To switch the hair dryer completely off, unplug the power cord from the socket.

Programme Table

Programme	Icon	Usage
Fast mode		This programme is suitable for quick and effective hair drying.

Programme	Icon	Usage
Temperature alternation		This programme automatically alternates between cold and warm air. It is therefore suitable for drying hair and shaping the hairstyle.
Long hair		This programme is suitable for effective drying of long hair.
Short Hair		This programme is suitable for effective drying of short hair.
Children's programme		This programme is suitable for drying children's hair.
Animal programme		This programme is suitable for effective drying of animal hair.

Operation of the Concentrator and Diffuser

- The concentrator/diffuser is connected to the air outlet. Simply place it on the air outlet and gently push on it until you hear a click.
- The concentrator is suitable for drying and styling individual strands of hair using a round brush.
- The diffuser is suitable for drying and styling curly and wavy hair.



Caution:

Connect or remove the concentrator and diffuser only when the dryer is turned off and disconnected from the power source.



Tip:

To achieve the best results wash your hair with shampoo before using the dryer, then dry your hair using a towel to reduce excessive moisture and then comb your hair. We recommend the use of a conditioner or hair lotion, which simplifies the combing and then drying your hair.

CLEANING AND MAINTENANCE

- Before cleaning, unplug the power cord from the mains socket and let the appliance cool down.



Caution:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.



Caution:

To clean any appliance parts, never use cleaning agents with abrasive effects, thinners etc. that could damage the appliance surface. None of the components of this appliance are dishwasher safe.

Cleaning the hair dryer

- To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water and well wrung out. Wipe dry with a clean cloth.

Cleaning the grille and air inlet filter

- We recommend cleaning the protective grille and the air inlet filter regularly.
- Make sure that the dryer is turned off and the power cord plug is disconnected from the mains socket.
- Hold the dryer by the handle with one hand and carefully turn the protective grille with the other. Then pull down the protective grill.
- Use a brush to remove dust and dirt from the filter and from the protective grille.
- Push the protective grille back and turn the protective grille until you feel resistance.



Caution:

Never use water or a damp cloth for cleaning. Make sure the protective grill is completely dry before reinstalling.

STORAGE

- If you are not going to use the appliance for an extended period of time, unplug it from the mains socket, allow it to cool down and clean it according to the instructions in the "CLEANING AND MAINTENANCE" section.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.



Caution:

Never wrap the power cord around the body of the dryer.

TROUBLESHOOTING

Problem	Cause	Solution
<p>Low Voltage Error1</p>	Weak current	Turn off the dryer and connect it to a different socket. If the problem persists, have the socket voltage checked. Contact a qualified electrician.
<p>NTC Failure Error2</p>	Internal fault	Turn off the dryer and disconnect it from the power source. Wait and reconnect. If the problem persists, please contact a service centre.
<p>Over Temperature Error3</p>	The dryer is overheated.	Turn off the dryer and disconnect it from the power source. Let it cool down. If the problem persists, please contact a service centre.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V~
Rated frequency.....	50–60 Hz
Rated input.....	1,600 W
Noise level.....	<82 dB(A)

The declared noise emission value of this appliance is ≤82 dB(A), which represents the A sound power level relative to a reference sound power of 1 pW.

Values provided according to Commission Regulation EU 2023/826

Off mode	
Power consumption in off mode	0 W
Time needed for the equipment to automatically reach off mode	0 min
Standby mode	
Power consumption in Standby mode	–
Time needed for the equipment to automatically reach standby mode	–
Networked standby mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

.....

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

.....

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-fen-shd-8600bk-akcija-cena/>