

Uputstvo za upotrebu

TESLA side by side frižider RB4300FHXE

TESLA



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/tesla-side-by-side-frizider-rb4300fhxe-akcija-cena/>

TESLA

SIDE-BY-SIDE REFRIGERATOR FREEZER

RB4300FHBE
RB4300FHXE

User Manual

ENG

SLO



Product images are for illustrative purposes only and may differ from the actual product.

SAFETY INFORMATION

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep to the precautions of these user instructions as the manufacturer is not responsible for damages caused by omission.

Children and vulnerable people safety

- This appliance can be used by children aged of 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have supervision or have been given instructions concerning the use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance should not be done by children unless they are aged from 8 years and above and supervised.
- Keep all packaging well away from children. There is risk of suffocation.
- If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent

playing children from suffering electric shock or closing themselves in.

- If this appliance features a magnetic door seal to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not damage the refrigerant circuit.

Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacture.

Do not touch the light bulb if it has been on for a long period of time because it could be very hot.¹

When positioning the appliance, ensure the supply cord is not trapped or damaged.

Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.

- avoid open flames and sources of ignition
- thoroughly ventilate the room in which the appliance is situated
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.
- This appliance is intended to be used in a household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

Any electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.

The light bulb supplied with this appliance is a “special use light bulb” usable only with the appliance supplied. This “special use lamp” is not usable for domestic lighting.¹

- Power cord must not be lengthened.
- Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
- Make sure that you can come to the main plug of the appliance.
- Do not pull the main cable.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- You must not operate the appliance without the lamp.

- This appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.

Daily use

- Do not put hot things on the plastic parts in the appliance.
- Do not place food products directly against the rear wall.
- Frozen food must not be re-frozen once it has been thawed out.²
- Store pre-packed frozen food in accordance with the frozen food manufacture, s instructions.²
- Appliance, s manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.²
- Ice lollies can cause frost burns if consumed straight from the appliance.²

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with

food and accessible drainage systems.

- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments (if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the main plug from the power socket.
- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.²
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain. If the drain is blocked, water will collect at the bottom of the appliance.³

Installation

- For electrical connection carefully follow the instructions given in specific paragraphs.
- Unpack the appliance and check if there are damages

on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.

- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be provided around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, con- denser) to prevent possible burn.
- The appliance must not be located close to radiators or cookers.
- Make sure that the main plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

Energy saving

- Do not put hot food in the appliance;
- Do not pack food close together as this prevents air circulating;
- Make sure food does not touch the back of the compartment(s);
- If electricity goes off, do not open the door(s);


- Do not open the door(s) frequently;
- Do not keep the door(s) open for a long time;
- Do not set the thermostat on exceeding cold temperatures;
- All accessories, such as drawers, shelves balconies, should be kept there for lower energy consumption.

¹ If there is a light in the compartment.

² If there is a freezer compartment.

³ If there is a fresh-food storage compartment.

OVERVIEW

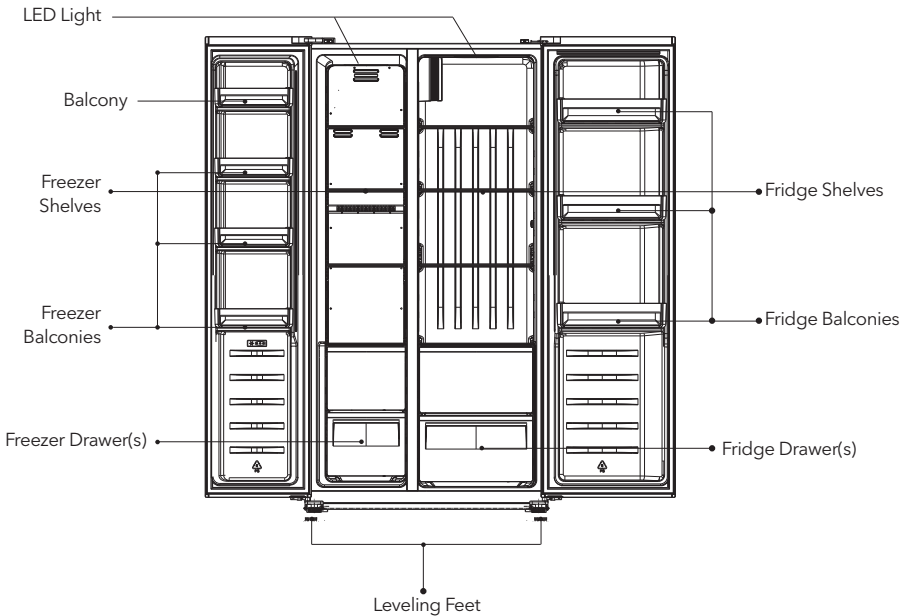


Note: Picture is for reference only.

INSTALLATION


Remove the doors

Tool required: Philips screwdriver, Flat bladed screwdriver.


- Ensure the unit is unplugged and empty.
- To take the door off, it is necessary to tilt the unit backwards. You should rest the unit on something solid so that it will not slip during the door reversing process.
- All parts removed must be saved to do the reinstallation of the door.
- Do not lay the unit flat as this may damage the coolant system.
- It's better that 2 people handle the unit during assembly.

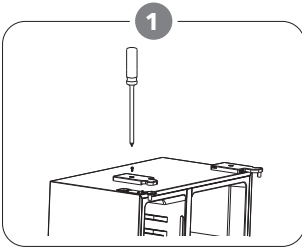


Unscrew hinge cover by Philips screwdriver.

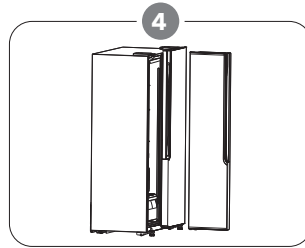


Lift the door and place it on a soft pad. Then remove another door as same process.

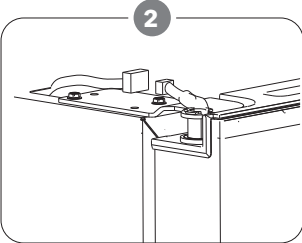


Disconnect the harness.

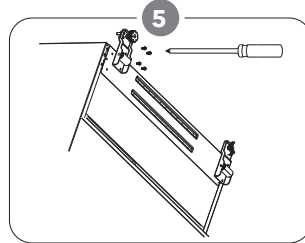

Unscrew bottom hinges.

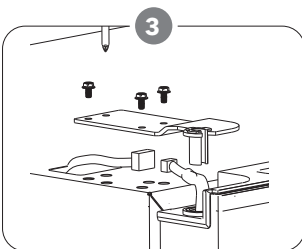



Unscrew top hinge.

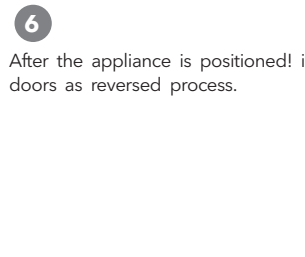

After the appliance is positioned! install the doors as reversed process.


Space Requirement

- Keep enough space of door open.
- Keep at least 50mm gap at two sides and back.

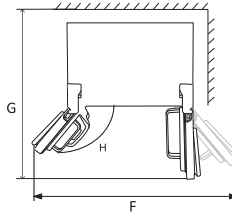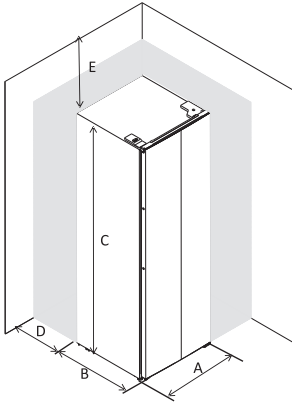

A	900
B	590
C	1770
D	min=50
E	min=50
F	1800
G	1490
H	135°

Levelling the refrigerator

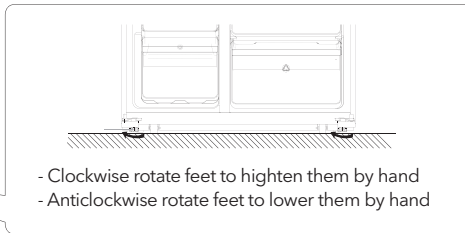

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

For refrigerating appliances with climate class:

- extended temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C (SN);
- temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C (N);
- subtropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C (ST);
- tropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C (T);

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet to ensure best performance. If the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 100 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

This refrigerating appliance is not intended to be used as a built-in appliance.

WARNING!

It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.


Electrical connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be grounded. The power supply cable plug is provided with a contact for this purpose. If the

domestic power supply socket is not grounded, connect the appliance to a separate ground in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

DAILY USE

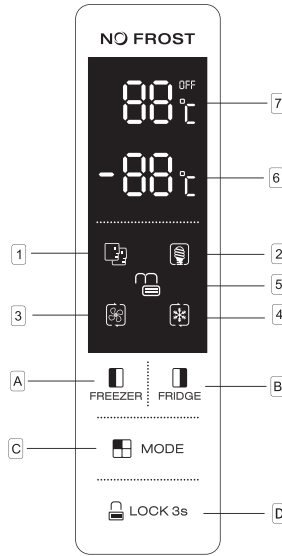





Buttons

- A Press to adjust temperature of freezer compartment (left side) from -14°C to -22°C.
- B Press to adjust temperature of fridge compartment (right side) from 2°C to B°C and off cooling.
- C Press to select running mode from **SMART**, **ECO**, **SUPER COOLING**, **SUPER FREEZING** and **USER'S SETTING** (no symbol in display).
- D Press **3 SEC.** button and hold for 3 seconds to lock other three buttons.
Press it and hold for 1 second to unlock other three buttons.

Display

- 1 **SMART** mode, the refrigerator sets the temperature of two compartments automatically according to internal temperature and ambient temperature.
- 2 **ECO** mode, the refrigerator runs in lowest energy consumption setting.
- 3 **SUPER COOLING** cools the fridge compartment to the lowest temperature as designed. After approx. 2.5 hours, the temperature setting would be restored to the previous user setting mode.
- 4 **SUPER FREEZING** cools the fridge compartment to the lowest temperature as designed. After approx. 50 hours, the temperature setting would be restored to the previous user setting mode.
Tips: it's better to switch on **SUPER FREEZING** mode 24 hours ahead before large amount of food is placed in freezer compartment.

- 5 **LOCK**, the symbol will light on if buttons are locked.
- 6 Display the setting temperature of freezer compartment.
- 7 Display the setting temperature of fridge compartment.
- 8 Child lock would be failed since power failure. Child lock would be valid automatically after 25 seconds since last operation. Display panel would get turn off automatically after 2 minutes since last operation.
- 9 Some features may not be applicable with this model.

Mode	Indicator light	Freezer temperature display	Fridge temperature display
Smart		The temperature display for freezer and fridge will change based on ambient temperature (see the table below).	
ECO		-15°C	+8°C
Super cooling		No change	+2°C
Super freezing		-25°C	No change

NOTE

- ECO mode: Select this mode when you want to save power.
- Super cooling mode: This mode allows you to cool foods quickly and will be automatically deactivated after 2.5 hours of operation.
- Super freezing mode: This mode allows you to freeze foods quickly and will be automatically deactivated after 50 hours of operation.





Door open alarm

When any door is left open or not closed completely for about 60 seconds, the appliance will sound an alarm. Close the fridge door then the alarm will stop.

If the door is not well closed, then the alarm will sound every 35 seconds until the doors are well closed. If doors are open for 10 continuous minutes without closing, the internal LED light would be turned off automatically.

Child safety lock


This function is designed to prevent children from operating the appliance.

- To activate the function, press and hold  LOCK 3s for about 3 seconds. The lock indicator light  will illuminate indicating the safety lock function is activated.
- To deactivate the function, press and hold  LOCK 3s for about 1 second. The unlock indicator light  will illuminate indicating the safety lock function is deactivated.

CAUTION!

2 star balcony, with temperature between -12°C and -18°C, is not suitable for ice cream.

2 Star Balcony

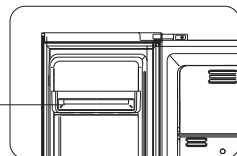

First use

Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly

IMPORTANT! Do not use detergents or abrasive powders, as these will damage the finish.

Daily use

Position different food in different compartments according to be below table

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	<ul style="list-style-type: none"> Foods with natural preservatives, such as jams, juices, drinks, condiments. Do not store perishable foods.
Crisper drawer (salad drawer)	<ul style="list-style-type: none"> Fruits, herbs and vegetables should be placed separately in the crisper bin. Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf - middle	<ul style="list-style-type: none"> Dairy products, eggs
Fridge shelf - top	<ul style="list-style-type: none"> Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer drawer(s)/shelf	<ul style="list-style-type: none"> Foods for long-term storage. Bottom drawer/shelf for raw meat, poultry, fish. Middle drawer/shelf for frozen vegetables, chips. Top drawer/shelf for ice cream, frozen fruit, frozen, baked goods.

Thawing

- Deep-frozen or frozen food, prior to be used, can be thawed in the fridge compartment or at room temperature, depending on the time available for this operation.
- Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.


Ice-cube

This appliance may be equipped with one or more ice-cube to produce ice.

Accessories


Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

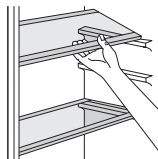

Positioning the door balconies

To permit storage of food packages of various sizes, the door balconies can be placed at different heights. To make these adjustments proceed as follows: gradually pull the balcony in the direction of the arrows until it comes free, then reposition as required.

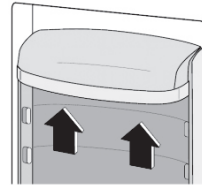

Temperature setting recommendation

Environment Temperature	Temperature Setting	
Summer		Fridge set on 4°C
		Freezer set on -18°C
Normal		Fridge set on 4°C
		Freezer set on -18°C
Winter		Fridge set on 4°C
		Freezer set on -18°C

Information above give users recommendation of temperature setting.

Impact on Food Storage

- Under Recommended setting, the best storage time of fridge is no more than 3 days.
- Under Recommended setting, the best storage time of freezer is no more than 1 month.
- The best storage time may reduce under other settings.

HELPFUL HITS AND TIPS

Hints for freezing

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required;
- wrap up the food in aluminum foil or polythene and make sure that the packages are airtight;
- do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
- be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time;
- not open the door frequently or leave it open longer than absolutely necessary.
- Once defrosted, food deteriorates rapidly and cannot be refrozen.
- Do not exceed the storage period indicated by the food manufacture.

Hints for fresh food refrigeration

To obtain the best performance:

- Do not store warm food or evaporating liquids in the refrigerator
- Do cover or wrap the food, particularly if it has a strong flavor

Hints for refrigeration

- Meat (all types): wrap in polythene bags and place on the glass shelves above the vegetable drawer.
- For safety, store in this way only one or two days at the most.
- Cooked foods, cold dishes, etc...: these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.
- butter and cheese: these should be placed in special airtight containers or wrapped in aluminum foil or polythene bags to exclude as much air as possible.

- Milk bottle: these should have a cap and should be stored in the balconies on the door.
- Bananas, potatoes, onions and garlic, if not packed, must not be kept in the fridge.

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.

! CAUTION!

The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

IMPORTANT! Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off the circuit breaker or fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

TROUBLESHOOTING

! CAUTION!



Before troubleshooting, disconnect the power supply. Only a qualified electrician of competent person must do the troubleshooting that is not in this manual.


IMPORTANT! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
Appliance does not work	Power plug is not plugged in or is loose	Insert power plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Socket malfunctions are to be corrected by an electrician.
Appliance freezes or cools too much	Temperature is set too cold or the appliance runs at SUPER modes.	Turn the temperature regulator to a warmer setting temporarily.
The food is not frozen enough.	Temperature is not properly adjusted.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
Heavy build up of frost on the door seal.	The appliance is near a heat source.	Please look in the installation location section.
	Door seal is not air tight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
Side panels are hot	It's normal. Heat exchange is in the side panels.	Take gloves to touch side panels if need.

If the malfunction shows again, contact the Service Center. These data are necessary to help you quickly and correctly. Write the necessary data here, refer to the rating plate.

Environment Protection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations which can be obtained from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the  symbol are recyclable.

 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging materials

The materials with the symbol are recyclable. Dispose the packaging in a suitable collection container to recycle it.

Disposal of the appliance

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.

**WARNING!**

During using, service and disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color.

It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor.

Please be far away fire source during using, service and disposal.

VARNOSTNE INFORMACIJE

Zaradi vaše varnosti in zagotavljanja pravilne uporabe pred namestitvijo in prvo uporabo naprave natančno preberite ta uporabniški priročnik, vključno z napotki in opozorila. Da bi se izognili nepotrebnim napakam in nesrečam, je pomembno zagotoviti, da so vse osebe, ki uporabljajo aparat, temeljito seznanjene z njegovim delovanjem in varnostnimi funkcijami. Shranite ta navodila in poskrbite, da ostanejo z aparatom, če ga boste preselili ali prodali, da bodo vsi, ki ga bodo uporabljali v njegovi življenjski dobi, ustrezno obveščeni o uporabi in varnosti aparata.

Zaradi varnosti življenja in premoženja upoštevajte varnostne ukrepe iz teh navodil za uporabo, saj proizvajalec ne odgovarja za škodo, nastalo zaradi opustitve.

Varnost otrok in ranljivih oseb

- To napravo lahko uporabljajo otroci, stari 8 let in več, ter osebe z zmanjšanimi fizičnimi, senzoričnimi ali duševnimi sposobnostmi ali osebe s pomanjkanjem izkušenj in znanja, če so pod nadzorom ali če so prejeli navodila za varno uporabo naprave in razumejo nevarnosti, ki so s tem povezane.
- Otrokom, starim od 3 do 8 let, je dovoljeno nalagati in odlagati v ta aparat.
- Otroci morajo biti pod nadzorom, da se ne igrajo z aparatom.
- Čiščenja in uporabniškega vzdrževanja ne smejo opravljati otroci, razen če so stari od 8 let in več ter pod nadzorom.
- Vso embalažo hranite na varnem pred otroki. Obstaja nevarnost zadušitve.
- Če aparat zavržete, izvlecite vtič iz vtičnice, prerežite

priključni kabel (čim bližje čim bližje aparatu) in odstranite vrata, da preprečite igrajoče se otroke, da bi utrpeli električni udar ali da bi se zaprli.

- Če je ta aparat opremljen z magnetnim tesnilom na vratih, ki nadomešča starejši aparat z vzmetno ključavnico na vratih ali pokrovu, poskrbite, da bo vzmetna ključavnica neuporabna, preden zavržete stari aparat. S tem boste preprečili, da bi aparat postal smrtonosna past za otroka.

Splošna varnost

Prezračevalne odprtine v ohišju aparata ali vgrajeni konstrukciji naj ne bodo ovirane.

Ne uporabljajte mehanskih naprav ali drugih sredstev za pospeševanje postopka odmrzovanja, razen tistih, ki jih priporoča proizvajalec.

Ne poškodujte hladilnega kroga.

V hladilnih aparatih ne uporabljajte drugih električnih naprav (kot so aparati za pripravo sladoleda), razen če jih je za ta namen odobril proizvajalec.

Ne dotikajte se žarnice, če je že dlje časa prižgana, saj je lahko zelo vroča.¹

Pri nameščanju aparata pazite, da se napajalni kabel ne zatakne ali poškoduje.

Na zadnji strani aparata ne nameščajte več prenosnih vtičnic ali prenosnih dobaviteljev električne energije.

- V tej napravi ne shranjujte eksplozivnih snovi, kot so aerosolne pločevinke z vnetljivim gorivom.
- V hladilnem krogu naprave je hladilno sredstvo izobuten (R600a), naravni plin z visoko stopnjo okoljske združljivosti, ki pa je vnetljiv.
- Med prevozom in namestitvijo aparata se prepričajte, da se nobena od komponent hladilnega kroga ne

poškoduje.

- izogibajte se odprtemu ognju in virom vžiga
- temeljito prezračite prostor, v katerem je naprava nameščena
- Nevarno je spreminjati specifikacije ali na kakršen koli način spreminjati ta izdelek. Vsaka poškodba kabla lahko povzroči kratek stik, požar in/ali električni udar.
- Ta naprava je namenjena uporabi v gospodinjstvu in podobnih aplikacijah, kot so npr.
 - kuhinjski prostori za osebje v trgovinah, pisarnah in drugih delovnih okoljih;
 - na kmetijah ter pri strankah v hotelih, motelih in drugih stanovanjskih okoljih;
 - v okoljih tipa nočitev in zajtrk;
 - v gostinstvu in podobnih dejavnostih, ki niso namenjene prodaji na drobno.

Vse električne komponente (vtič, napajalni kabel, kompresor itd.) mora zamenjati pooblaščen servisier ali usposobljeno servisno osebje.

Žarnica, priložena tej napravi, je "žarnica za posebno uporabo", ki jo je mogoče uporabljati le s priloženo napravo. Ta "žarnica za posebno uporabo" ni uporabna za domačo razsvetljavo.¹

- Napajalnega kabla ne smete podaljšati.
- Prepričajte se, da vtič ni stisnjen ali poškodovan s hrbtno stranjo naprave. Zmečkan ali poškodovan vtič se lahko pregreje in povzroči požar.
- Prepričajte se, da lahko pridete do glavnega vtiča aparata.
- Glavnega kabla ne potegnite za sabo.
- Če je vtičnica električnega vtiča ohlapna, ne vstavljajte

električnega vtiča. Obstaja nevarnost električnega udara ali požara.

- Naprave ne smete uporabljati brez svetilke.
- Ta naprava je težka. Pri njenem premikanju je treba biti previden.
- Ne odstranjajte in se ne dotikajte predmetov iz zamrzovalnega prostora, če imate vlažne/mokre roke, saj lahko to povzroči odrgnine na koži ali opekline zaradi zmrzali/zmrzovalnika.
- Izogibajte se dolgotrajni izpostavljenosti naprave neposredni sončni svetlobi.

Vsakodnevna uporaba

- Na plastične dele naprave ne polagajte vročih predmetov.
- Živil ne postavljajte neposredno ob zadnjo steno.
- Zamrznjenih živil ne smete ponovno zamrzniti, ko so bila enkrat odmrznjena²
- Predpakirana zamrznjena živila shranjujte v skladu z navodili proizvajalca zamrznjenih živil.
- Strogo je treba upoštevati priporočila proizvajalcev aparatov za shranjevanje. Oglejte si ustrezna navodila.
- V zamrzovalni prostor ne postavljajte gaziranih ali gaziranih pijač, saj v posodi nastane pritisk, ki lahko povzroči eksplozijo in s tem poškodbe aparata.²
- Sladoledne lučke lahko povzročijo opekline zaradi zmrzali, če jih zaužijete neposredno iz naprave.²
- Da bi se izognili kontaminaciji živil, upoštevajte naslednja navodila:
- Dolgotrajno odpiranje vrat lahko povzroči znatno povišanje temperature v prostorih aparata.
- Redno čistite površine, ki lahko pridejo v stik z živilo, in dostopne odtočne sisteme.

- Očistite rezervoarje za vodo, če jih niste uporabljali 48 ur; izpraznite vodovodni sistem, priključen na oskrbo z vodo, če vode niste črpali 5 dni.
- Surovo meso in ribe shranjujte v ustreznih posodah v hladilniku, tako da ne pridejo v stik z drugimi živili ali ne kapljajo nanje.
- Predali za zamrznjena živila z dvema zvezdicama (če so predstavljeni v aparatu) so primerni za shranjevanje predhodno zamrznjenih živil, shranjevanje ali izdelavo sladoleda in izdelavo ledenih kock.
- Predali z eno, dvema in tremi zvezdicami (če so v aparatu) niso primerni za zamrzovanje svežih živil.
- Če aparat dlje časa ostane prazen, ga izklopite, odmrznite, očistite, posušite in pustite vrata odprta, da preprečite nastanek gorišča v aparatu.

Vzdrževanje in čiščenje

- Pred vzdrževanjem napravo izklopite in izključite glavni vtič iz vtičnice.
- Naprave ne čistite s kovinskimi predmeti.
- Za odstranjevanje zmrzali z aparata ne uporabljajte ostrih predmetov. Uporabite plastično strgalo.
- Redno preglejte odtok v hladilniku, ali se v njem nahaja odmrznjena voda. Po potrebi odtok očistite. Če je odtok zamašen, se bo voda zbirala na dnu aparata.³

Namestitev

- Za električno povezavo natančno upoštevajte navodila, navedena v posameznih odstavkih.
- Razpakirajte napravo in preverite, ali je poškodovana. Če je naprava poškodovana, je ne priključite. Morebitne poškodbe takoj prijavite kraju, kjer ste aparat kupili. V tem primeru obdržite embalažo.

- Pred priključitvijo naprave je priporočljivo počakati vsaj štiri ure, da se olje vrne v kompresor.
- Okoli aparata je treba zagotoviti ustrezno kroženje zraka, saj v nasprotnem primeru pride do pregrevanja. Za zagotovitev zadostnega prezračevanja upoštevajte navodila, ki se nanašajo na namestitev.
- Če je le mogoče, naj bodo distančni deli izdelka ob steni, da se ne bi dotikali toplih delov (kompresorja, kondenzatorja) ali jih lovili, da preprečite morebitne opekline.
- Naprava ne sme biti nameščena v bližini radiatorjev ali štedilnikov.
- Prepričajte se, da je glavni vtič po namestitvi naprave dostopen.

Servis

- Vsa električna dela, ki so potrebna za servisiranje naprave, mora opraviti usposobljen električar ali kompetentna oseba.
- Ta izdelek mora servisirati pooblaščen servisni center, uporabljati pa je treba samo originalne nadomestne dele.

Varčevanje z energijo

- V aparat ne vstavljajte vroče hrane;
- Živil ne shranjujte tesno skupaj, saj to preprečuje kroženje zraka;
- Prepričajte se, da se živila ne dotikajo hrbtne strani predalov;
- Če zmanjka elektrike, ne odpirajte vrat;
- Vrat ne odpirajte pogosto;
- Vrat ne puščajte odprtih dlje časa;
- Termostata ne nastavljajte na previsoke temperature;


- Vsa dodatna oprema, kot so predali in police, naj bo tam shranjena zaradi manjše porabe energije.

¹ Če je v predalu luč.

² Če je predal z zamrzovalnikom.

³ Če je predal za shranjevanje sveže hrane.

PREGLED

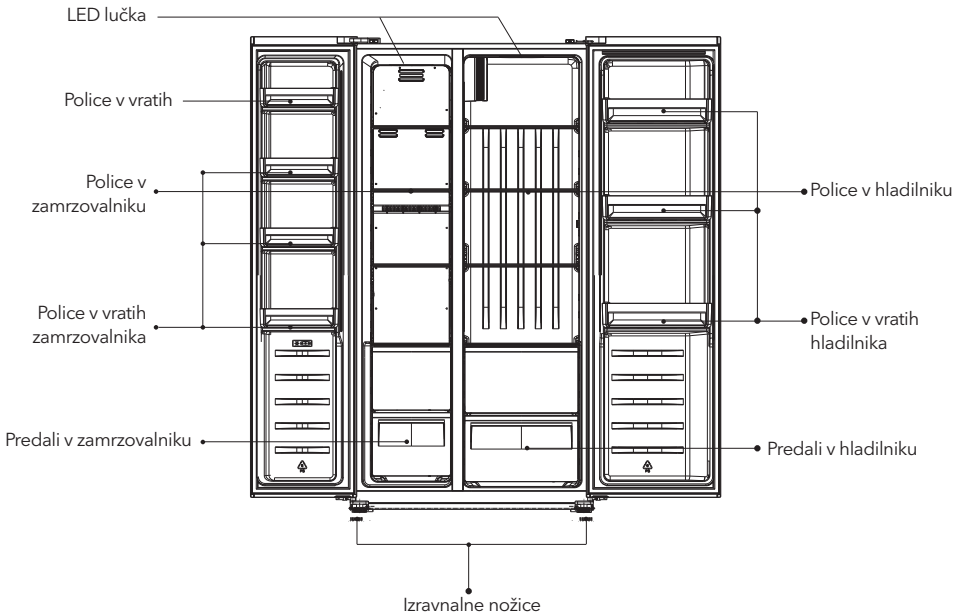


Opomba: Slika je zgolj referenčna.

NAMESTITEV


Obratna vrata

Potrebno orodje: Philipsov izvijač, ploščati izvijač, šesterokotni ključ.


- Prepričajte se, da je enota izključena iz električnega omrežja in prazna.
- Za odstranitev vrat je treba enoto nagniti nazaj. Napravo morate nasloniti na nekaj trdnega, da med postopkom obračanja vrat ne zdrsne.
- Vse odstranjene dele je treba shraniti za izvedbo ponovne namestitve vrat.
- Enote ne smete položiti na ravno površino, saj lahko s tem poškodujete hladilni sistem.
- Med sestavljanjem enote je bolje, da z njo upravljata dve osebi.

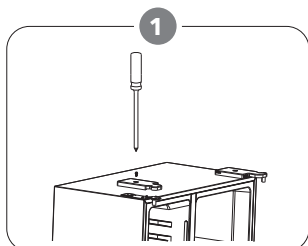


S Philipsovim izvijačem odvijte pokrov tečajev.

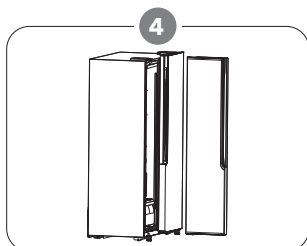


Dvignite vrata in jih položite na mehko podlogo. Nato odstranite druga vrata po enakem postopku.

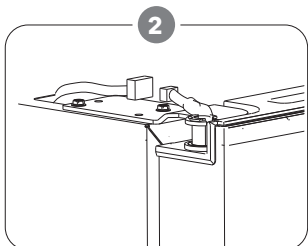

Odklopite kabelski sklop.

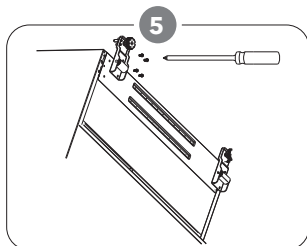

Odvijte spodnje tečaje.


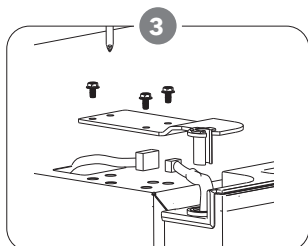


Odvijte zgornji tečaj.

6
Ko je naprava nameščena, namestite vrata po obratnem postopku.


Prostorske zahteve

- Ohranite dovolj prostora za odprta vrata.
- Na obeh straneh in zadaj naj bo vsaj 50 mm prostora.
-

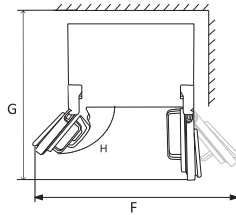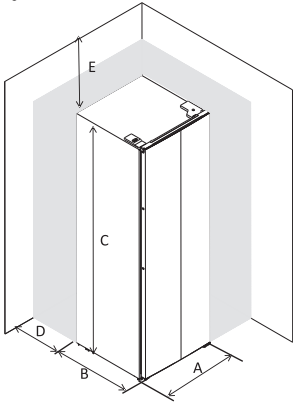

A	900
B	590
C	1770
D	min=50
E	min=50
F	1800
G	1490
H	135°

Izravnava hladilnika

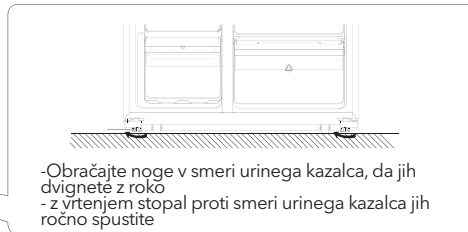

Pozicioniranje

Napravo namestite na mestu, kjer temperatura okolice ustreza podnebnemu razredu, navedenemu na tipski ploščici naprave:

Za hladilne aparate s podnebnim razredoms:

- podaljšano temperaturo: to hlajenje
- je namenjena uporabi pri temperaturah okolice od 10 °C do 32 °C (SN);
- Temperatura: ta hladilni aparat je namenjen uporabi pri temperaturah okolice od 16 °C do 32 °C (N);
- subtropski: ta hladilni aparat se uporablja pri temperaturah okolice od 16 °C do 38 °C (ST);
- tropski: ta hladilni aparat je namenjen uporabi pri temperaturah okolice od 16 °C do 43 °C (T);

Lokacija

Napravo je treba namestiti daleč stran od virov toplote, kot so radiatorji, kotli, neposredna sončna svetloba itd. Zagotovite, da lahko zrak prosto kroži po zadnji strani ohišja, da zagotovite najboljše delovanje. Če je aparat nameščen pod visečo stensko enoto, mora biti najmanjša razdalja med vrhom omarice in stensko enoto vsaj 100 mm. V idealnem primeru, pa aparat ne sme biti nameščen pod visečimi stenskimi enotami. Natančno izravnavo zagotavlja ena ali več nastavljivih nogic na dnu omarice. Ta hladilni aparat ni namenjen uporabi kot vgradni aparat.

⚠ OPOZORILO!

Omogočen mora biti izklop naprave iz električnega omrežja, zato mora biti vtič po namestitvi lahko dostopen.


Električna priključitev

Pred priključitvijo preverite, ali napetost in frekvenca, ki sta navedeni na tipski ploščici, ustrežata vašemu domačemu električnemu omrežju. Naprava mora biti ozemljena. Vtič napajalnega kabla je v ta namen opremljen s kontaktom.

Če domača vtičnica ni ozemljena, priključite napravo na ločeno ozemljitev v skladu z veljavnimi predpisi in se posvetujte z usposobljenim električarjem.

Proizvajalec zavrača vso odgovornost, če zgoraj navedeni varnostni ukrepi niso upoštevani. Ta naprava je skladna z direktivami E.E.C.

VSAKODNEVNA UPORABA

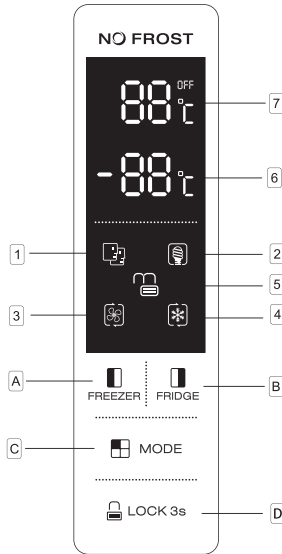





Gumbi

- A Pritisnite , da nastavite temperaturo zamrzovalnega prostora (leva stran) od -14 °C do -22 °C.
- B Pritisnite , da prilagodite temperaturo hladilnika (desna stran) od 2 °C do 8 °C in izklopite hlajenje.
- C Pritisnite za izbiro načina delovanja med **SMART**, **ECO**, **SUPER COOLING**, **SUPER FREEZING** in **USER'S SETTING** (na zaslonu ni simbola).
- D Pritisnite gumb **3 SEC.** in ga držite 3 sekunde, da zaklenete druge tri gumbе. Pritisnite in držite 1 sekundo, da odklenete druge tri gumbе.

Zaslon

- 1 V načinu **SMART** hladilnik samodejno nastavi temperaturo dveh predelkov glede na notranjo temperaturo in temperaturo okolice.
- 2 Način **ECO** hladilnik deluje z nastavitvijo najnižje porabe energije.
- 3 **SUPER COOLING** hladi predel hladilnika na najnižjo temperaturo, kot je predvideno. Po približno 2,5 urah bi se nastavev temperature vrnila na prejšnji način uporabniške nastavitve.
- 4 **SUPER FREEZING** ohladi predel hladilnika na najnižjo temperaturo, kot je predvideno. Po približno 50 urah se nastavev temperature vrne na prejšnji način uporabniške nastavitve. Nasveti: bolje je vklopiti način **SUPER ZAMRZOVANJE 24 ur** prej, preden v zamrzovalnik položite večjo količino živil.

- 5 **LOCK**, ta symbol se prižge v kolikor so gumbi zaklenjeni.
- 6 Prikažite nastavljeno temperaturo zamrzovalnega prostora.
- 7 Prikažite nastavljeno temperaturo predala hladilnika.
- 8 Otroška ključavnica ne bi bila uspešna, ker je prišlo do izpada električnega napajanja. Otroška ključavnica bi bila veljavna samodejno po 25 sekundah od zadnjega delovanja. Zaslonka plošča se samodejno izklopi po 2 minutah od zadnjega delovanja.
- 9 Nekatere funkcije pri tem modelu morda ne bodo uporabne.

Način	Kontrolna lučka	Prikaz temperature v zamrzovalniku	Prikaz temperature v hladilniku
Smart		Prikaz temperature za zamrzovalnik in hladilnik se spreminja glede na temperaturo okolice (glejte spodnjo tabelo).	
ECO		-15°C	+8°C
Super cooling		Ni spremembe	+2°C
Super freezing		-25°C	Ni spremembe

OPOMBA

- ECO mode: Ta način izberite, ko želite varčevati z energijo.
- Super cooling mode: Ta način omogoča hitro hlajenje živil in se samodejno deaktivira po 2,5 urah delovanja.
- Super freezing mode: Ta način omogoča hitro zamrzovanje živil in se samodejno deaktivira po 50 urah delovanja.





Alarm za odprta vrata

Če katera koli vrata ostanejo odprta ali niso popolnoma zaprta približno 60 sekund, naprava sproži alarm. Zaprite vrata hladilnika in alarm se bo ustavil.

Če vrata niso dobro zaprta, se alarm sproži vsakih 35 sekund, dokler vrata niso dobro zaprta. Če so vrata odprta neprekinjeno 10 minut, ne da bi se zaprla, se notranja lučka LED samodejno izklopi.

Otroška varnostna ključavnica


Ta funkcija je zasnovana tako, da otrokom preprečuje upravljanje aparata.

- Če želite aktivirati funkcijo, pritisnite in pridržite  LOCK 3s. Prižgala se bo lučka za zaklepanje  kar pomeni, da je funkcija varnostnega zaklepanja aktivirana.
- Če želite deaktivirati funkcijo, pritisnite in pridržite  LOCK 3s za 1 sekundo. Prižge se  indikator odklepanja, kar pomeni, da je funkcija varnostnega zaklepanja deaktivirana.

POZOR!

Polica z dvema zvezdicama in temperaturo med -12 °C in 18 °C ni primerena za sladoleđ.

Polica z dvema zvezdicama

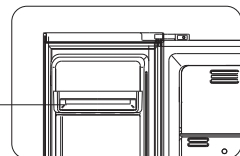

Prva uporaba

Čiščenje notranjosti

Pred prvo uporabo aparata notranjost in vse notranje dodatke operite z mlačno vodo in nevtralnimi milom, da odstranite značilen vonj povsem novega izdelka, nato pa jih temeljito posušite.

POMEMBNO! Ne uporabljajte detergentov ali abrazivnih praškov, saj ti poškodujejo zaključni sloj.

Dnevna uporaba

Postavite različna živila v različne predale v skladu s spodnjo tabelo.

Predeli hladilnika	Tip hrane
Poličke v vratih hladilnika	<ul style="list-style-type: none"> Živila z naravnimi konzervansi, kot so marmelade, sokovi, pijače, začimbe. Ne shranjujte hitro pokvarljivih živil.
Crisper drawer (predal za sadje in zelenjavo)	<ul style="list-style-type: none"> Sadje, zelišča in zelenjavo je treba ločeno pospraviti v predal za sadje in zelenjavo. V hladilniku ne shranjujte banan, čebule, krompirja in česna.
Srednje police hladilnika	<ul style="list-style-type: none"> Mlečni proizvodi, jajca
Zgornje police hladilnika	<ul style="list-style-type: none"> Živila, ki jih ni treba kuhati, kot so živila, pripravljena za uživanje, delikatesno meso, ostanki hrane.
Predal(-i)/polica zamrzovalnika	<ul style="list-style-type: none"> Živila za dolgoročno shranjevanje. Spodnji predal/polka za surovo meso, perutnino in ribe. Srednji predal/polka za zamrznjeno zelenjavo, čips. Zgornji predal/polica za sladoled, zamrznjeno sadje, zamrznjene in pekavske izdelke.

Odtaljevanje

- Globoko zamrznjena ali zamrznjena živila lahko pred uporabo odmrznete v predelu hladilnika ali pri sobni temperaturi, odvisno od časa, ki je na voljo za ta postopek.
- Majhne kose lahko kuhate še zamrznjene, neposredno iz zamrzovalnika. V tem primeru bo kuhanje trajalo dlje.

Postavitev vratnih polic

Za shranjevanje različno velikih paketov živil so police v vratih lahko postavljene na različnih višinah. Te prilagoditve izvedete na naslednji način: postopoma potegnite polico v smeri puščic, dokler se ne prosti.



Ledene kocke

Ta naprava je lahko opremljena z enim ali več pladnji za ledene kocke za proizvodnjo ledu.

Accessories

Premične police

Stene hladilnika so opremljene z vrsto vodil, tako da lahko police poljubno namestite.

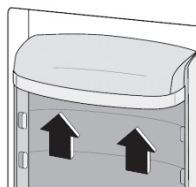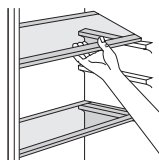

Priporočilo glede nastavitve temperature

Temperatura okolja	Nastavitve temperature	
Poletje	<p>The image shows a digital control panel for a refrigerator. At the top, it says 'NO FROST'. Below that, there are two temperature displays: '88 OFF °C' and '-88 °C'. There are several icons for different functions: a fan, a light, a lock, and a snowflake. At the bottom, there are labels for 'FREEZER' and 'FRIDGE', a 'MODE' button, and a 'LOCK 3s' indicator.</p>	Hladilnik nastavljen na 4°C
Običajno		Zamrzovalnik je nastavljen na -18°C
		Hladilnik nastavljen na 4°C
Zima		Zamrzovalnik je nastavljen na -18°C
		Hladilnik nastavljen na 4°C
		Zamrzovalnik je nastavljen na -18°C

Zgornje informacije uporabnikom dajejo priporočilo za nastavitve temperature.

Vpliv na skladiščenje hrane

- Pri priporočeni nastavitvi je najboljši čas shranjevanja v hladilniku največ 3 dni.
- Pri priporočeni nastavitvi je najboljši čas shranjevanja v zamrzovalniku največ 1 mesec.
- Pri drugih nastavitvah se lahko čas shranjevanja skrajša.

UPORABNI NAPOTKI

Napotki za zamrzovanje

Da bi postopek zamrzovanja čim bolj izkoristili, vam ponujamo nekaj pomembnih nasvetov:

- največjo količino hrane, ki jo je mogoče
- je navedena na napisni ploščici;
- postopek zamrzovanja traja 24 ur. V tem času ne smete dodajati dodatnih živil za zamrzovanje;
- zamrzujte le sveža in temeljito očiščena živila najvišje kakovosti;
- živila pripravite v majhnih porcijah, da jih lahko hitro in v celoti zamrznete in da lahko pozneje odmrznete le potrebno količino;
- živila zavijte v aluminijasto folijo ali polietilen in poskrbite, da so embalaže neprepustne za zrak;
- ne dovolite, da se sveža, nezamrznjena živila dotikajo že zamrznjenih živil, da se prepreči dvig temperature slednjih;
- pusto živilo se bolje in dlje hrani kot mastno; sol skrajša rok shranjevanja živil;
- vodni led, če ga zaužijete takoj po odstranitvi iz zamrzovalnika, lahko povzroči zmrzlinke opekline na koži;
- če se odstrani iz zamrzovalnega prostora, lahko pride do zamrznitvenih opeklin;
- priporočljivo je, da se na vsakem posameznem pakiranju navede datum zamrznitve, da lahko spremljate čas shranjevanja.

Nasveti za shranjevanje zamrznjenih živil

Če želite doseči najboljšo zmogljivost te naprave, morate:

- se prepričajte, da so komercialno zamrznjene je trgovci na drobno živila ustrezno skladiščili;
- zagotoviti, da se zamrznjena živila v najkrajšem možnem času prenesejo iz skladišča živil v zamrzovalnik;
- vrat ne odpirajte pogosto in jih ne puščajte odprtih dlje, kot je nujno potrebno.
- Ko živila enkrat odmrznete, se hitro pokvarijo in jih ni mogoče ponovno zamrzniti.
- Ne prekoračite obdobja skladiščenja, ki ga je navedel proizvajalec živil.

Namigi za hlajenje svežih živil

Za doseganje najboljše zmogljivosti:

- V hladilniku ne shranjujte tople hrane ali izhlapevajočih tekočin
- živila pokrijte ali zavijte, zlasti če imajo močan okus

Napotki za hlajenje

- Meso (vse vrste): zavijte ga v polietilenske vrečke in postavite na steklene police nad predalno za zelenjavo.
- Zaradi varnosti meso tako shranjujte le en ali največ dva dni.
- Kuhana hrana, hladne jedi itd.: te morajo biti pokrite in jih lahko postavite na katero koli polico.
- Sadje in zelenjava: temeljito ju je treba očistiti in položiti v poseben(-e) predal(-e). maslo in sir: postaviti ju je treba v posebne neprepustne posode ali zaviti v aluminijasto folijo ali polietilenskimi vrečkami, da se izloči čim več zraka.
- Steklenička za mleko: mora imeti pokrovček in

mora biti shranjena na balkonih na vratih.

- Banan, krompirja, čebule in česna, če niso zapakirani, ne smete hraniti v hladilniku.

Čiščenje

Iz higienskih razlogov je treba redno čistiti notranjost aparata, vključno z notranjimi dodatki.

! OPOZORILO!

Med čiščenjem naprava ne sme biti priključena na električno omrežje. Nevarnost električnega udara! Pred čiščenjem izklopite aparat in izvlecite vtič iz električnega omrežja ali izklopite oziroma ugasnite odklopnik ali varovalko. Naprave nikoli ne čistite s parnim čistilcem. V električnih komponentah se lahko nabere vlaga, nevarnost električnega udara! Vroči hlapi lahko povzročijo poškodbe plastičnih delov. Naprava mora biti suha, preden jo ponovno vključite v uporabo.

POMEMBNO! Eterična olja in organska topila lahko napadejo plastične dele, npr. limonin sok ali sok iz pomarančne lupine, maslena kislina, čistila, ki vsebujejo ocetno kislino.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off the circuit breaker or fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

ODPRAVLJANJE TEŽAV

! CAUTION!


Pred odpravljanjem težav odklopite napajanje. Odpravljanje težav, ki niso opisane v tem priročniku, lahko opravi le usposobljen električar ali pristojna oseba.

POMEMBNO! Med normalno uporabo se slišijo nekateri zvoki (kompresor, kroženje hladilnega sredstva).

Težava	Morebitni vzrok	Rešitev
Naprava ne deluje	Napajalni vtič ni priključen ali je zrahljan	Vstavite napajalni vtič.
	Varovalka je pregorela ali je okvarjena	Preverite varovalko in jo po potrebi zamenjajte.
	Vtičnica je okvarjena	Napake v vtičnici mora odpraviti električar.
Naprava zamrzne ali se preveč ohladi	Temperatura je nastavljena prenizko ali naprava deluje v načinu SUPER.	Začasno nastavite regulator temperature na višjo temperaturo.
Živila niso dovolj zamrznjena.	Temperatura ni ustrezno nastavljena.	Oglejte si poglavje o začetni nastavitvi temperature.
	Vrata so bila dlje časa odprta.	Vrata odpirajte le toliko časa, kolikor je potrebno.
	V zadnjih 24 urah je bila v aparat vstavljena večja količina tople hrane.	Začasno nastavite regulacijo temperature na hladnejšo nastavitvev.
	Naprava je v bližini vira toplote.	Prosimo, pogledajte v razdelek o mestu namestitve
Močan nastanek zmrzali na tesnilu vrat.	Vrata ne tesnijo dovolj.	Previdno segrejte puščajoče dele vratnega tesnila s sušilnikom za lase (na hladni nastavitvi). Hkrati segreto tesnilo vrat z roko oblikujte tako, da se pravilno prilega.
Nenavadni zvoki	Naprava ni ravna.	Ponovno nastavite noge.
	Naprava se dotika stene ali drugih predmetov.	Napravo rahlo premaknite.
	Sestavni del, npr. cev, na zadnji strani aparata se dotika drugega dela aparata ali stene	Po potrebi sestavni del previdno nagnite, da se umakne s poti..
Stranske plošče so vroče	To je normalno. Izmenjava toplote poteka v stranskih panelih.	Po potrebi vzemite rokavice, da se dotaknete stranskih plošč.

Če se okvara ponovno pojavi, se obrnite na servisni center. Ti podatki so potrebni za hitro in pravilno pomoč. Tukaj zapišite potrebne podatke, glejte tablico z nazivom.

Varstvo okolja

 Ta naprava ne vsebuje plinov, ki bi lahko škodovali ozonskemu plašču, niti v hladilnem krogu niti v izolacijskih materialih. Naprave se ne sme zavreči skupaj s komunalnimi odpadki in smetmi. Izolacijska pena vsebuje vnetljive pline: naprava mora odstraniti v skladu s predpisi o napravah, ki jih lahko dobite pri lokalnih organih. Izogibajte se poškodbam hladilne enote, zlasti toplotnega izmenjevalnika. Materiale, uporabljene v tej napravi, označene s simbolom, je mogoče reciklirati.



Simbol na izdelku ali njegovi embalaži označuje, da se ta izdelek ne sme obravnavati kot gospodinjski odpadek. Namesto tega ga je treba vložiti v ustrezno zbirno mesto za recikliranje električne in elektronske opreme. S pravilnim odstranjevanjem tega izdelka boste pomagali preprečiti morebitne negativne posledice za okolje in zdravje ljudi, ki bi jih sicer lahko povzročilo neustrezno ravnanje z odpadki tega izdelka. Za podrobnejše informacije o recikliranju tega izdelka se obrnite na lokalni svet, službo za odstranjevanje gospodinjskih odpadkov ali trgovino, v kateri ste izdelek kupili.

Materiali za pakiranje

Materiale s simbolom je mogoče reciklirati. Za recikliranje embalažo odvrzite v ustrezen zbiralnik.

Odstranjevanje naprave

1. Odklopite napajalni vtič iz omrežne vtičnice.
2. Odrežite napajalni kabel in ga zavržite.

**OPOZORILO!**

Med uporabo, servisiranjem in odstranjevanjem naprave bodite pozorni na simbol, podoben levemu, ki se nahaja na zadnji strani naprave (zadnja plošča ali kompresor) in je rumene ali oranžne barve. To je opozorilni simbol za nevarnost požara. V ceveh hladilnega sredstva in kompresorju so vnetljivi materiali.

Med uporabo, servisiranjem in odstranjevanjem se oddaljite od vira ognja.

TESLA

tesla.info



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Tesla, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/tesla-side-by-side-frizider-rb4300fhxe-akcija-cena/>