

Uputstvo za upotrebu (EN)

LIEBHERR vinska vitrina WKes 653

LIEBHERR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/liebherr-vinska-vitrina-wkes-653-akcija-cena/>

Operating instructions

Wine storage cabinet

Page 16



Many thanks for your trust.

Congratulations on your purchase of this wine storage cabinet. In buying this product, which is distinguished by its perfect user-friendliness, impeccable reliability and high quality, you have chosen a top class appliance. We wish you a lot of pleasure with your new wine storage cabinet - and a lot of enjoyment from your wines.

The fewer the grapes produced in an area, the better the wine.

Poor, well-drained soils are best for good wines. The properties of the soil influence the vitality of the vine, which in turn affects the quality of the grape. Climate is another factor that is important for wine. Because light and air humidity are important for the development of the flavour of the wine.

The right environment for your wines.

A vine is an extremely sensitive plant. From the time it is planted to its maturing period and the time the grapes are harvested and the wine is made, it is dependent on three factors: light, air humidity and ambient temperature. This sensitivity continues even once the wine is bottled. To allow the flavour of the wine to fully develop or to preserve the excellent aroma, the wine has to be stored perfectly - and your wine storage cabinet offers the best conditions for this.


EPREL database

As from 1 March 2021, information about energy labelling and ecodesign requirements will be available in the European product database (EPREL). You can access the product database using the following link: <https://eprel.ec.europa.eu/>. You will be asked to enter the model identifier. You will find the model identifier on the type plate.

Contents


	Page
Setting up	18
Range of appliance use	18
Dimensions.....	18
Electrical requirement	19
Operating and control elements	19
Switching the appliance on and off	20
Setting the temperature	20
Fan switch.....	20
Audible warning signal	21
Interior light	21
Setup mode	22
Equipment	24
Storing wine	25
Defrosting	26
Cleaning	26
Malfunctions	27
Shutting your appliance down.....	27
Safety instructions and warnings	28
Disposal notes	29
Wall mounting	29

Description of appliance and equipment

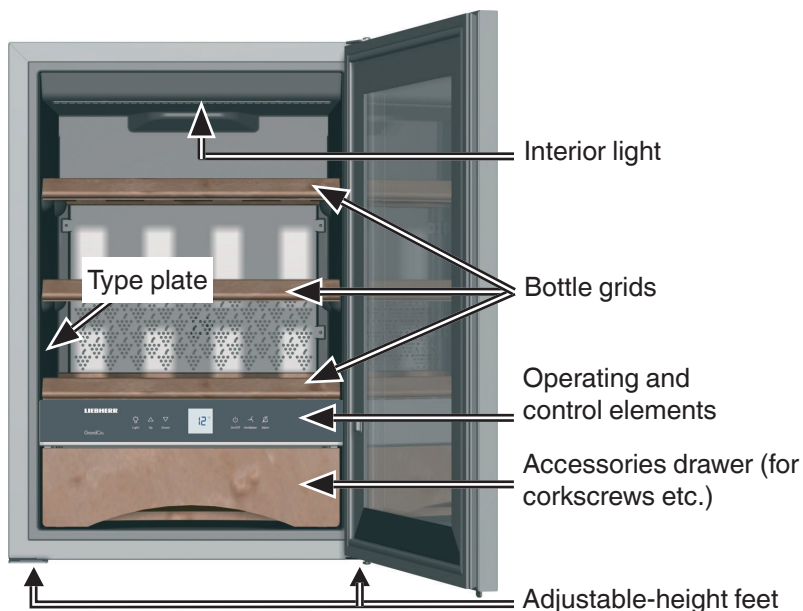

Setting up

- Avoid locating the appliance in direct sunlight or near heat sources such as an oven or a radiator.
- The floor should be level and even. You can compensate for an uneven floor by adjusting the adjustable feet.
- Please make sure the appliance is properly ventilated. The ventilation slots must not be covered!
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.
- The appliance is set to operate within specific ambient temperature limits according to its climate rating. These temperature limits should not be exceeded. The appliance has the following climate rating: SN = +10°C to +32°C.
- When installing two appliances next to each other, always leave a gap of 50 mm to prevent condensation forming in the gap.

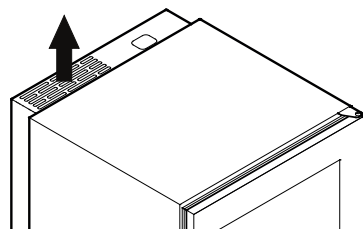

Range of appliance use


The appliance is suited only for storing wine.

The appliance is not suited for storing and cooling pharmaceuticals, blood plasma, laboratory preparations or similar substances and products subject to the Medical Devices Directive 2007/47/EC.

Any misuse of the appliance may result in damage to or spoilage of the stored goods.

Furthermore, the appliance is unsuited for use in areas exposed to an explosion hazard.

Dimensions

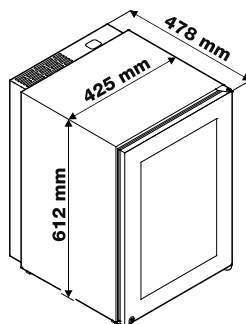

Electrical connection

Only operate the appliance with alternating current (AC). The permissible voltage and frequency are indicated on the type plate.

The socket must be properly earthed and protected by a fuse. The tripping current of the fuse must be between 10 A and 16 A.


The socket must not be situated behind the appliance and must be easily accessible.

Do not connect the appliance using an extension cable or extension socket.

Do not use stand-alone inverters (conversion of direct current to alternating/three-phase current) or energy-saving plugs. Risk of damage to the electronic control system!

Operating and control elements

The electronic control panel has the new "**touch capacitance technology**". Any function can be activated by a fingertip touching the corresponding icon.

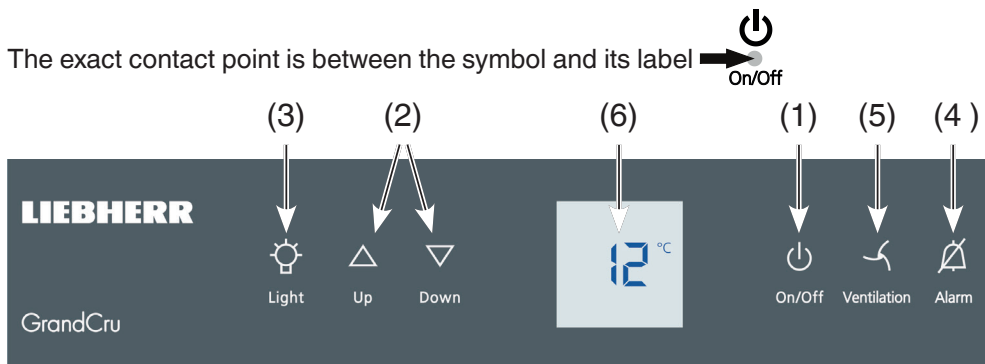


Operating elements

- ① Appliance ON/OFF
- ② Temperature setting buttons
- ③ Interior light ON/OFF
- ④ Mute alarm
- ⑤ Fan ON/OFF
- ⑥ Temperature display

Control elements


- ⑦ Interior light ON symbol
- ⑧ Alarm symbol
- ⑨ Child lock activated symbol
- ⑩ Fan ON symbol

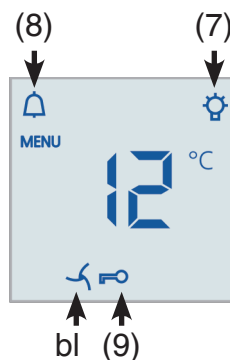

Switching the appliance on an off

Switching on: Press the **On/Off** button so that the temperature display lights up.

Switching off: Press the **On/Off** button for approx. 3 seconds so that the temperature display goes out.

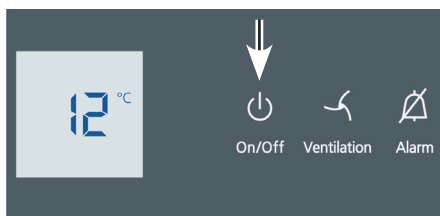

Setting the temperature


To reduce the temperature:

Press the Down button.

To increase the temperature:

Press the Up button.

- While you are entering the temperature, the set temperature will flash on the display.
- You can change the settings in increments of 1°C briefly pressing the button again.
- The electronic controls will switch over automatically about 5 seconds after the last time you pressed the button, and the actual temperature will be displayed.

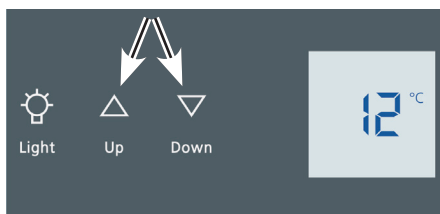


The temperature can be set between +5°C and +20°C.

Fan switch

Thereby a climate which corresponds to that of a wine cellar is achieved inside the appliance. Corks are prevented from drying out due to an increased level of humidity.

Switching on: Press the Ventilation button. The  symbol will light up.

Switching off: Press the Ventilation button again. The  symbol will go out.

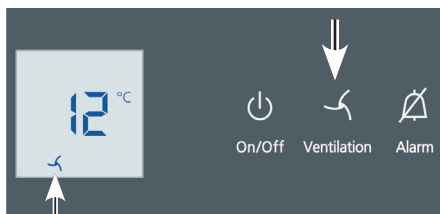

Audible warning signal


The audible warning signal helps to protect your wines against excessive temperatures fluctuations.

It sounds when the door has been left open for longer than 60 seconds.

It sounds when the interior gets too warm or too cold. The temperature display will also flash. The symbol  lights up.

The audible warning device is switched off by pressing the **Alarm** button.

The temperature display will continue to flash until the cause of the alarm has been rectified.

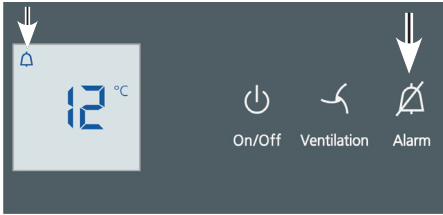


Interior light

The interior light is fitted on the inside at the top.

The interior light can be switched on and off using the **Light** button.

The  symbol lights up when the light is switched on.

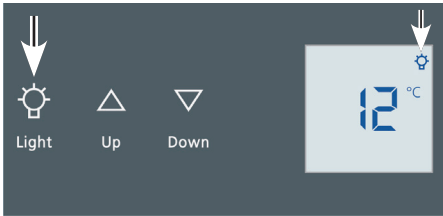

Caution - class 1M laser radiation. When cover is removed, do not look directly at light through optical instruments.

The interior lighting may only be replaced by the customer service technician or by competent skilled personnel!

Furthermore, the brightness of the lighting can be adjusted.

Press and hold the Light button and at the same time press the temperature setting buttons to increase or decrease the brightness.



Down = darker

Up = brighter

Lighting	
Class ¹	Light source
This product contains a light source that meets energy efficiency rating G	LED
¹ The appliance may contain light sources with different energy efficiency classes. The lowest energy efficiency class is indicated.	

Setup mode

The following functions can be activated in setup mode:

 = Child lock

 = Display brightness

= Child lock

The child lock is designed to protect the appliance from being switched off accidentally.

Activating the child lock

- Activate setup mode by pressing the  button for 5 seconds.

- The display reads



- Press the  button.

Ventilation

- The display reads



- Press the  button again.

Ventilation

- The  symbol will light up to indicate that the child lock is activated.

- Exit setup mode by pressing the  button.

On/Off

Deactivating the child lock

- Activate setup mode by pressing the  button for 5 seconds.

Ventilation

- The display reads



- Press the  button.

Ventilation

- The display reads



- Press the  button again.

Ventilation

- The  symbol will go out, indicating that the child lock is deactivated.

- Exit setup mode by pressing the  button.

On/Off

h = Display brightness

Adjusting the display brightness

- Activate setup mode by pressing the  button for 5 seconds.
Ventilation

- Press the  button until **h** appears in the display.
Down

Press the  button.
Ventilation

- The display reads  

- Press the   buttons and set the brightness between
Up Down

h 0 = minimum and

h 5 = maximum.

- When you reach the desired level, press the  button.
Ventilation
- Exit setup mode by pressing the  button.
On/Off
- Close the door. The new setting will activate after about 1 minute.

Equipment

Wooden shelves

The shelves are designed for the horizontal storage of wine bottles. This prevents the corks from drying out.

Accessories drawer

Accessories such as corkscrews etc. can be kept in the bottom drawer.

The shelves and drawer can be removed by simply pulling them towards you. To do this, the door must be open at least 90°.



Air exchange with activated charcoal filter


The way in which wines continue to mature depends on the ambient conditions. The quality of the air is therefore decisive for preserving the wine.

To guarantee optimum air throughput, the appliance is fitted with an activated charcoal filter at the top of the rear wall.

We recommend that you replace the illustrated filter once a year. Filters can be obtained from your dealer.

Changing the filter:

The filter can be removed by depressing the recesses on the left and right with a small screwdriver.

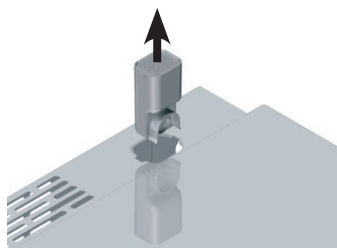

Storing wine


Four bottles can be stored side by side on a wooden shelf.



Tall wine bottles can also be stored crossways in the appliance.



To ensure stable storage of the bottles, click the retaining plates provided onto the middle slat of the wooden shelf.

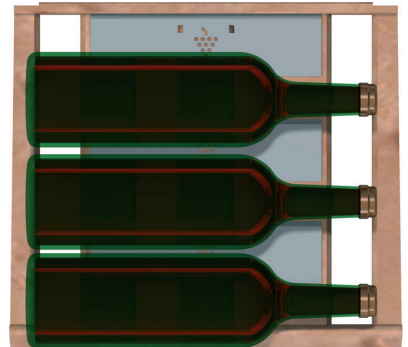

Defrosting

The appliance defrosts automatically. The water that forms on the rear wall drains into a reservoir at the back of the appliance and evaporates automatically through the compressor heat.

Cleaning

Before cleaning always switch off the appliance. Pull out the mains plug or remove/unscrew the fuse.

Never use abrasive or acidic cleaning agents or chemical solvents. We recommend the use of an all-purpose cleaner with neutral pH.

Do not use steam cleaners because of the risk of injury and damage.

- Do not use abrasive sponges or scourers, do not use concentrated cleaning agents and never use cleaning agents containing sand, chloride or acid or chemical solvents, as these would damage the surfaces and could cause corrosion.
- Clean the side panels and door surfaces with a clean and soft cloth. If necessary, use a moist cloth (water + detergent). Alternatively, use a micro-fibre cloth.
- Clean the inside of the appliance, except the wooden grid shelves, with lukewarm water and a little detergent.
- Ensure that no cleaning water penetrates into the electrical components.
- Dry all parts well with a cloth.
- Do not remove the type plate from the inside of the appliance; it is important for servicing purposes.

Malfunctions

You may be able to rectify the following faults by checking the possible causes yourself.

- **Appliance does not function:**

- Is the appliance switched on?
- Is the plug correctly fitted in the mains socket?
- Is the fuse intact?

- **Loud running noise:**


- Is the appliance set up firmly on the floor?
- Does the appliance cause nearby items of furniture or objects to vibrate? Please note that noises caused by the refrigerant circuit cannot be avoided.

- **The temperature is not low enough:**

- Is the temperature setting correct (see "Setting the temperature")?
- Does the separately installed thermometer show the correct reading?
- Is the ventilation system working properly?
- Is the appliance set up too close to a heat source?

If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type designation (1), service number (2) and appliance number (3) as indicated on the type plate.

The position of the type plate is shown in the section entitled **Description of the appliance**.

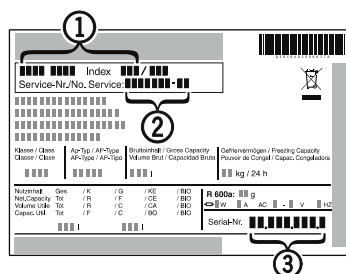

Shutting your appliance down

If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or switch off or unscrew the fuse. Clean the appliance and leave the door open in order to prevent unpleasant smells.

The appliance complies with the relevant safety regulations and EU Directives 2014/30/EU and 2014/35/EU.

Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- **Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.**
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance can be used by children of 8 years old and over, and also by persons with restricted physical, sensory or mental capacity or lack of experience and knowledge, if they are supervised or have been instructed on safe use of the appliance and understand the resulting risks. Children must not be allowed to play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- **If you have a lockable appliance, do not keep the key near the appliance or within reach of children.**
- Do not use electrical appliances inside the appliance.
- Do not damage the refrigerant circuit pipes.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- The LED light strip illuminates the interior of the appliance. It is not suitable for lighting a room.

Disposal notes

The appliance contains reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



When disposing of the appliance, ensure that the refrigerant circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.

- Disable the appliance.
- Pull out the mains plug.
- Cut through the connection cable.

WARNING

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packaging material.

Take the packaging material to an official collection point.

Wall mounting


The appliance can be wall-mounted. There are two mounting holes at the back of the appliance

Make sure the wall and fastenings can withstand the weight of the appliance when fully loaded. The empty appliance weighs 31 kg.

Important!

To ensure sufficient ventilation through the ventilation slots, the four wall spacers must always be inserted, regardless of whether the appliance is wall-mounted or standing on the floor against a wall.

Simply insert the spacers in the openings provided.

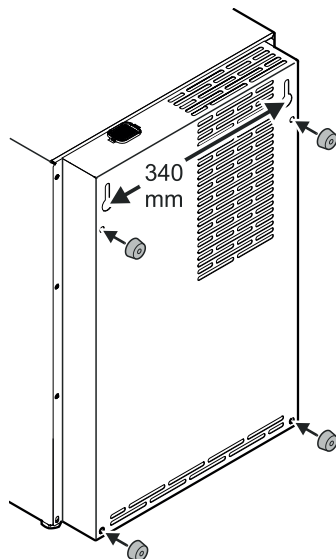



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Liebherr, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/liebherr-vinska-vitrina-wkes-653-akcija-cena/>