

Uputstvo za upotrebu (EN)

APC BVX1200LI-GR 1200VA UPS uređaj



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/apc-bvx1200li-gr-1200va-ups-uredjaj-akcija-cena/>



by Schneider Electric

User Manual Easy UPS

BVX Series 700VA, 900VA, 1200VA, 1600VA, 2200VA

IMPORTANT SAFETY INSTRUCTIONS

Read the instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this document or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to either a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Product Handling Guidelines



< 18 kg
< 40 lb



18-32 kg
40-70 lb



32-55 kg
70-120 lb



> 55 kg
> 120 lb



Safety and General Information

SAVE THESE INSTRUCTIONS –

This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries.

Inspect the package contents upon receipt. Notify the carrier and dealer if there is any damages.

- This UPS is intended for indoor use only.
- Mains socket outlet that supplies the UPS shall be installed near the UPS and shall be easily accessible.
- UPS must be connected to an earthed mains socket outlet.
- Servicing of batteries should be performed or supervised by personnel knowledgeable about batteries and required precautions. In this case, batteries is not user-replaceable.
- When replacing battery the UPS must be OFF, and its AC inlet unplugged.
- **CAUTION** Do not dispose of batteries in a fire. The batteries may explode.
- **CAUTION** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Do not open or mutilate batteries. They contain an electrolyte that is toxic and harmful to the skin and eyes.
- Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces.
- **CAUTION** A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries.
 - a. Remove watches, rings or other metal objects.
 - b. Use tools with insulated handles.
 - c. Wear rubber gloves and boots.
 - d. Do not lay tools or metal parts on top of batteries.
 - e. Disconnect the charging source prior to connecting or disconnecting battery terminals.
 - f. Determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance.

Radio Frequency Warning

This is a category C2 UPS product. In a residential environment, this product may cause radio interference, in which case the user may be required to take additional measures.

Product Description

The APC by Schneider Electric Easy UPS offers power and surge protection for wireless networks, computers, gaming consoles and other electronics in your home or business. This UPS supply battery backup during outages and unstable voltage fluctuations, as well as provide protection from damaging surges and spikes. They are the choice helps to protect your data and keep you connected.

Place and Power On


1. Place the Easy UPS to avoid:

- Direct sunlight
- Excessive heat
- Excessive moisture
- Excessive dust/dirt



For operation, please place the unit on the floor.

2. Connect the battery by pulling the battery handle up, and then pushing it into the unit.



3. Connect equipment to the UPS. Avoid using extension cords.

4. Plug the Easy UPS power cord directly into a wall outlet, not into a surge protector or power strip.

5. Press the ON/OFF button to turn on the unit.

The green “Power On” indicator confirms that the Easy UPS is on and ready to provide protection.

The Easy UPS should charge for at least 24 hours to ensure sufficient runtime. The unit is being charged whenever it is connected to AC power, whether the unit is turned ON or OFF.

Operational Features

Automatic Voltage Regulation (AVR)

Automatic Voltage Regulation boosts/trimms the AC voltage when it drops/exceeds levels. This allows the equipment plugged into the unit to operate during low/high voltage conditions, conserving the battery power in the event of a power cut. The Easy UPS will switch to battery power if the input voltage level becomes too low/high for the Automatic Voltage Regulation to compensate, or if the AC power is distorted.

USB Charging Port for Smartphones and Tablets (only for BVX700LUI models)

This USB charging port provides a maximum of 5V 1 A DC power. The port will charge the connected equipment when the UPS is on line mode, battery mode and off charging mode.

Quick Mute

The Easy UPS is able to temporarily mute user correctable audible alarms such as On Battery. During such audible alarms, a short press of the POWER button will temporarily mute the audible alarm until the condition has been reset. A short double beep will confirm that Quick Mute has been activated. Pressing the POWER button for more than 2 seconds will turn off the UPS.

Other events such as Battery replacement and Charger notification can not be temporarily muted. The unit in these cases must be turned off.

Voltage Sensitivity Adjustment

Ensure the Easy UPS is off. Press and hold the POWER button for 10 seconds until a beep is heard. The LED will flash and sensitivity LOW is set. If press and hold the POWER button for 10 seconds again, the LED will be on and sensitivity MEDIUM is set.

LED status	Sensitivity Setting	Input Voltage Range	Recommended Use
Flash	LOW	140 Vac to 300 Vac	Use this setting with equipment that is less sensitivity to fluctuations in voltage or waveform distortions.
On	MEDIUM	145 Vac to 295 Vac	Factory default setting. Use this setting under normal conditions

LED Brightness Setting

The Easy UPS is able to control LED brightness. During On Line Mode, a short press of the POWER button will dim the LED brightness and heard a beep. Press one more time, the LED brightness will return again.

Self-Test

The Easy UPS will perform an automatic test of the internal battery when UPS is turned on or UPS operates in On Line Mode for 14 days. During On Line Mode, a longer press of the POWER button until three beeps are heard will perform a manual battery self-test. Then, the LED will flash and UPS will enter self-test mode.

Note: This will happen only when battery is fully charged in On-Line Mode.

Battery Replacement

⚠ CAUTION

RISK OF HYDROGEN SULPHIDE GAS AND EXCESSIVE SMOKE

- Replace the battery at least every 5 years or at the end of its service life, whichever is earlier.
- Replace the battery immediately when the UPS indicates battery replacement is necessary.
- Replace batteries with the same number and type of batteries as originally installed in the equipment.
- Replace the battery immediately when the UPS indicates a battery over-temperature condition or when there is evidence of electrolyte leakage. Power off the UPS, unplug it from the AC input, and disconnect the batteries. Do not operate the UPS until the batteries have been replaced.

Failure to follow these instructions can result in minor or moderate injury and equipment damage.

The battery in the Easy UPS is not user-replaceable. Contact SEIT Technical Support for a list of authorized service centers near you.

For the recycling battery information, please go to apc.com/recycle.

Features

- A

ON/OFF button with indicator

B

Input power cord

C

Battery backup and surge protected outlets

D

Battery connector
- E

Circuit breaker







F


AC power inlet with AC fuse


*only for model with IEC/Universal outlet


G


USB charger port(only for BVX700LUI Models)


Model	BVX700LI BVX700LUI BVX900LI	BVX700LI-GR BVX700LUI-GR BVX900LI-GR	BVX700LUI-AR BVX900LI-AR	BVX700LUI-MS	BVX900LI-MS
Output Type and Quantity	 x 4	 x 2	 x 2	 x 2	 x 2  x 1
Fuse	✓			✓	✓
Circuit Breaker		✓	✓		

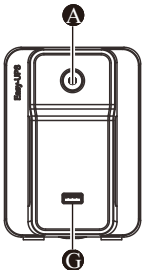


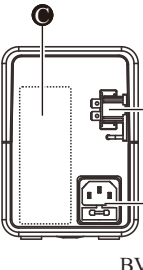

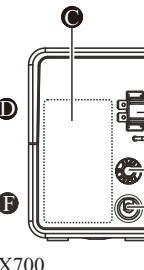



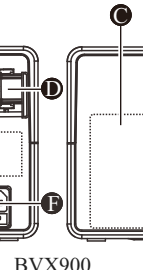










BVX700


BVX900


Model	BVX1200LI BVX1600LI BVX2200LI	BVX1200LI-GR BVX1600LI-GR BVX2200LI-GR	BVX1200LI-MS
Output Type and Quantity	 x 6	 x 4	 x 4  x 1
Fuse	✓		✓
Circuit Breaker		✓	

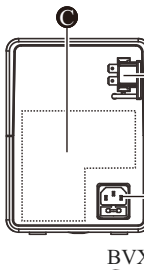


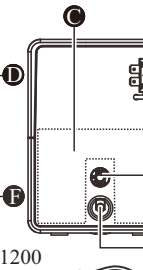

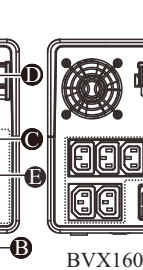

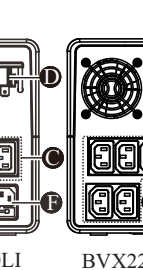

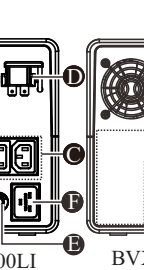

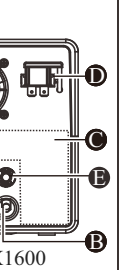


BVX1200

BVX1600LI

BVX2200LI

BVX1600
BVX2200



IEC jumper Cable for PC connection (1.2m)
*only for the model with IEC outlet

Easy UPS BVX Series 700VA, 900VA, 1200VA, 1600VA, 2200VA

5

Specifications

Model		BVX700LI BVX700LUI	BVX900LI	BVX1200LI	BVX1600LI	BVX2200LI
Input	Voltage	220-240 Vac				
	Frequency	50 Hz or 60 Hz (auto-sensing)				
	Brownout Transfer	170 Vac	140 Vac			
	Over-voltage Transfer	280 Vac	300 Vac			
Output	UPS Capacity (total)	700VA/360W	900VA/480W	1200VA/650W	1600VA/900W	2200VA/1200W
	Voltage On Battery	230 Vac ±10%				
	Frequency - On Battery	50 Hz / 60 Hz ± 0.5Hz				
	Transfer Time	6ms typical, 10ms max.				
	USB Charger Port	Only available for BVX700LUI	X	X	X	X
Protection	AC Input Circuit Breaker (only for GR and AR models)	5A/250Vac	7A/250Vac	10A/250Vac	12A/250Vac	15A/250Vac
	AC Input Fuse	T 5A L 250Vac	T 8A L 250Vac	T 10A L 250Vac	T 12A L 250Vac	T 15A L 250Vac
Battery	Type (maintenance-free)	12V, 7AH x 1 lead acid	12V, 9AH x 1 lead acid	12V, 9AH x 1 lead acid	12V, 7AH x 2 lead acid	12V, 9AH x 2 lead acid
	Average Life	The battery typically lasts for three to five years. Environmental factors impact battery backup life. Elevated temperatures, high humidity, poor quality mains power, and frequent, short duration discharges will shorten battery life. The battery in the Easy UPS Series is not user-replaceable. Contact SEIT Technical Support for a list of authorized service centers near you.				
	Typical Recharge Time	8 hours to 90% capacity				
	Physical	Net Weight	4.2 kg	6.0 kg	7.5 kg	10.2 kg
	Dimensions (Hx Wx D) cm	13.8 x9.8 x 31	16 x12 x 35.5	19 x14 x 39		
	Shipping Weight	4.5 kg	6.5 kg	8.5 kg	11.2 kg	13.2 kg
	Shipping Dimensions (H x Wx D) cm	22.2 x 14.2 x 34.6	25 x 19.7 x 43	29.7 x 23.5 x 49.5		
	Temperature	Operating	0 °C to 40 °C			
International Protection Code		IP20				

* The length of input power cord is 1.2m. For best operation, do not use output cable longer than 2m.

Status Indicators

LED	Audible Alarm	Condition
On	Off	On-line - The Easy UPS is supplying AC power to the connected equipment
	Constant Tone	On Line Overload - The power being used by the connected equipment has exceeded the capacity of the unit. Disconnect some equipment.
	Constant beeping (every 1/2 second)	Over-temperature Detected - The unit is overheating and will operate in AVR mode for 1 minute. The Easy UPS will shut down if the temperature is not lowered. Disconnect some of the connected equipment.
On (Off during 4 beeps)	4 beeps repeated every 30 seconds	On-Battery - The Easy UPS is supplying battery power.
Flashing	Constant beeping (every 1/2 second)	Low Battery - The Easy UPS is supplying battery power and the battery is near a total discharge state.
	Constant tone	Replace Battery Detected - The battery needs to be charged, or is at end of life. Note: - If the battery is disconnected, unplug the Easy UPS from AC source and then turn it off. Refer to the section “Place and Power On” on page 3. - If battery needs replacement, refer to the section “Battery Replacement” on page 2 for details.
Off	Short beep every 4 seconds	Low Battery Shutdown - During On Battery operation the battery power was almost completely exhausted, and the Easy UPS is waiting for AC power to return to normal.
	Constant Tone	On Line Overload Fault - The connected equipment requires more power than provided by the Easy UPS. Unplug devices one at a time to remove overload. If the detected problem is not corrected, contact SEIT Technical Support
		Charger Detected Fault - Easy UPS has an internal problem detected, and is no longer powering the load. Contact SEIT Technical Support
	Long beep every 4 seconds	Over-temperature Detected Fault - The Easy UPS has overheated and has shut down. Unplug connected devices one at a time or wait for a few hours for system to cool down.

Troubleshooting

Detected Problem and Possible Cause	Solution
The Easy UPS will not turn on	
The Easy UPS has not been turned on.	Press the ON/OFF button.
The Easy UPS is not connected to AC power, there is no AC power available at the wall outlet, or the AC power is experiencing a brownout or over voltage condition.	Make sure the power cord is securely connected to the wall outlet, and that there is AC power available at the wall outlet. Where applicable, check that the wall outlet is switched on.
The battery is disconnected.	Refer to the <i>“Place and Power On”</i> on page 3.
Connected equipment loses power	
A Easy UPS overload condition has occurred.	Remove all nonessential equipment connected to the outlets. One at a time reconnect equipment to the Easy UPS. Charge the battery for 24 hours to make sure it is fully charged. If the overload condition still occurs, replace the battery.
The Easy UPS battery is completely discharged.	Connect the Easy UPS to AC power and allow the battery to recharge for ten hours.
Connected equipment does not accept the step-approximated sine waveform from the Easy UPS.	The output waveform is intended for computers and peripheral devices. It is not intended for use with motor driven equipment.
The Easy UPS may require service.	Contact Schneider Electric Technical Support for more in depth troubleshooting
The ON/OFF button is green and flashing every 30 seconds. 4 beeps repeated every 30 seconds.	
The Easy UPS is operating on battery power.	The Easy UPS is operating normally on battery power. At this point the user should save all open files, and shutdown the computer. When AC power is restored the battery will recharge.
The ON/OFF button flashes green and constant beeps every 1/2 second.	
The Easy UPS battery has approximately empty and will shutdown.	The Easy UPS battery is near a total discharge state. At this point the user should save all open files, and shutdown the computer. When AC power is restored the battery will recharge.
The Easy UPS has an inadequate battery runtime	
The battery is not fully charged. The battery is near the end of useful life and should be replaced.	Leave the Easy UPS connected to AC power for ten hours while the battery charges to full capacity. As a battery ages, the runtime capability decreases.
The UPS and outlets are off but the UPS keeps beeping once every 4 seconds. The audible alarm will mute after 32 seconds.	
The UPS have shut down due to low battery, but control power exists.	The UPS will return to normal operation once the AC input voltage has returned to a normal range.

Service

If the unit requires service, do not return it to the dealer. Follow these steps:

1. Review the Troubleshooting section of the manual to eliminate common problems.
2. If the problem persists, contact Schneider Electric IT (SEIT) Customer Support through the APC by Schneider Electric website, **www.apc.com**.
 - a. Note the model number and serial number and the date of purchase. The model and serial numbers are located on the rear panel of the unit.
 - b. Call SEIT Customer Support and a technician will attempt to solve the problem over the phone. If this is not possible, the technician will issue a Returned Material Authorization Number (RMA#).
 - c. If the unit is under warranty, the repairs are free.
 - d. Service procedures and returns may vary internationally. Refer to the APC by Schneider Electric website for country specific instructions.
3. Pack the unit in the original packaging whenever possible to avoid damage in transit. Never use foam beads for packaging. Damage sustained in transit is not covered under warranty.
4. **Always DISCONNECT THE UPS BATTERIES before shipping. The United States Department of Transportation (DOT), and the International Air Transport Association (IATA) regulations require that UPS batteries be disconnected before shipping.** The internal batteries may remain in the UPS.
5. Write the RMA# provided by Customer Support on the outside of the package.
6. Return the unit by insured, pre-paid carrier to the address provided by Customer Support

Warranty

Register your product on-line. <http://warranty.apc.com>

The standard warranty is two (2) years from the date of purchase. SEIT standard procedure is to replace the original unit with a factory reconditioned unit. Customers who must have the original unit back due to the assignment of asset tags and set depreciation schedules must declare such a need at first contact with an SEIT Technical Support representative. SEIT will ship the replacement unit once the defective unit has been received by the repair department, or cross-ship upon the receipt of a valid credit card number. The customer pays for shipping the unit to SEIT. SEIT pays ground freight transportation costs to ship the replacement unit to the customer.

APC by Schneider Electric IT Customer Support Worldwide

For country specific customer support, go to the APC by Schneider Electric website, **www.apc.com**.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda APC, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/apc-bvx1200li-gr-1200va-ups-uredjaj-akcija-cena/>