

## Uputstvo za upotrebu (EN)

SENCOR sokovnik SSJ 4041BK

**SENCOR**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-sokovnik-ssj-4041bk-akcija-cena/>

# Masticating Slow Juicer

User's manual

EN



**SENCOR®**

SSJ 4041BK  
SSJ 4042RD  
SSJ 4043WH

Prior to using this appliance, please read the user's manual thoroughly, even in cases where you have previously familiarised yourself with the operation of similar types of appliances. Only use the appliance in the manner described in this user manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor and warranty card for at least the the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

EN-1

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

## TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS . . . . .	3
DESCRIPTION OF THE JUICER . . . . .	5
THE PRINCIPLE AND ADVANTAGES OF A MASTICATING SLOW JUICER . . . . .	6
BEFORE FIRST USE . . . . .	6
ASSEMBLING THE JUICER . . . . .	6
USING THE JUICER . . . . .	7
DISASSEMBLING THE JUICER . . . . .	7
USEFUL ADVICE AND TIPS . . . . .	8
CLEANING AND MAINTENANCE . . . . .	8
STORAGE . . . . .	9
TECHNICAL SPECIFICATIONS . . . . .	9
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS . . . . .	9
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT . . . . .	9

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

EN

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not use this appliance or play with it. Keep the appliance and its power cord out of their reach.
- This appliance is intended for processing a standard amount of fruit and vegetables in the household. Do not use it for any other purposes than those intended.
- Do not use the appliance in an industrial environment or outdoors.
- Only place the appliance on an even, dry and stable surface.
- Do not place the appliance on or near devices that are a source of heat.
- Never use accessories, which have not been supplied with this appliance or which have not been explicitly recommended by the manufacturer for this appliance.
- Before connecting the appliance to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in your power socket.
- Make sure that the appliance is correctly assembled before putting it into operation.
- Prior to juicing, remove hard stones that are contained in, for example, apricots, peaches, mangoes, etc. and inedible peels, e.g. from oranges, pineapples, melons, mandarins, etc.
- Do not use the juicer for processing frozen or excessively hard ingredients, e.g. sugar cane.
- Always use the supplied pusher to push the fruit and vegetables through the feed tube. Never use your hands or other items.
- Always turn off the appliance and disconnect it from the power socket if you will not be using it and if you are leaving it without supervision, before assembly, disassembly or cleaning.

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH


- Prior to removing parts that move during use, check that the appliance is turned off and disconnected from the power socket and wait until the moving parts come to a stop.
- Do not wash the base of the appliance under running water or submerge it in water or another liquid.
- Ensure that the power plug contacts do not come into contact with water or moisture.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it does not touch a hot surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- It is forbidden to use the appliance if it has a damaged power cord or plug. If the power cord is damaged, have it replaced at a professional service centre.
- Do not use the appliance if its strainer or any other part of the appliance is damaged. To prevent causing a dangerous situation, do not repair the appliance yourself. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

EN

## DESCRIPTION OF THE JUICER

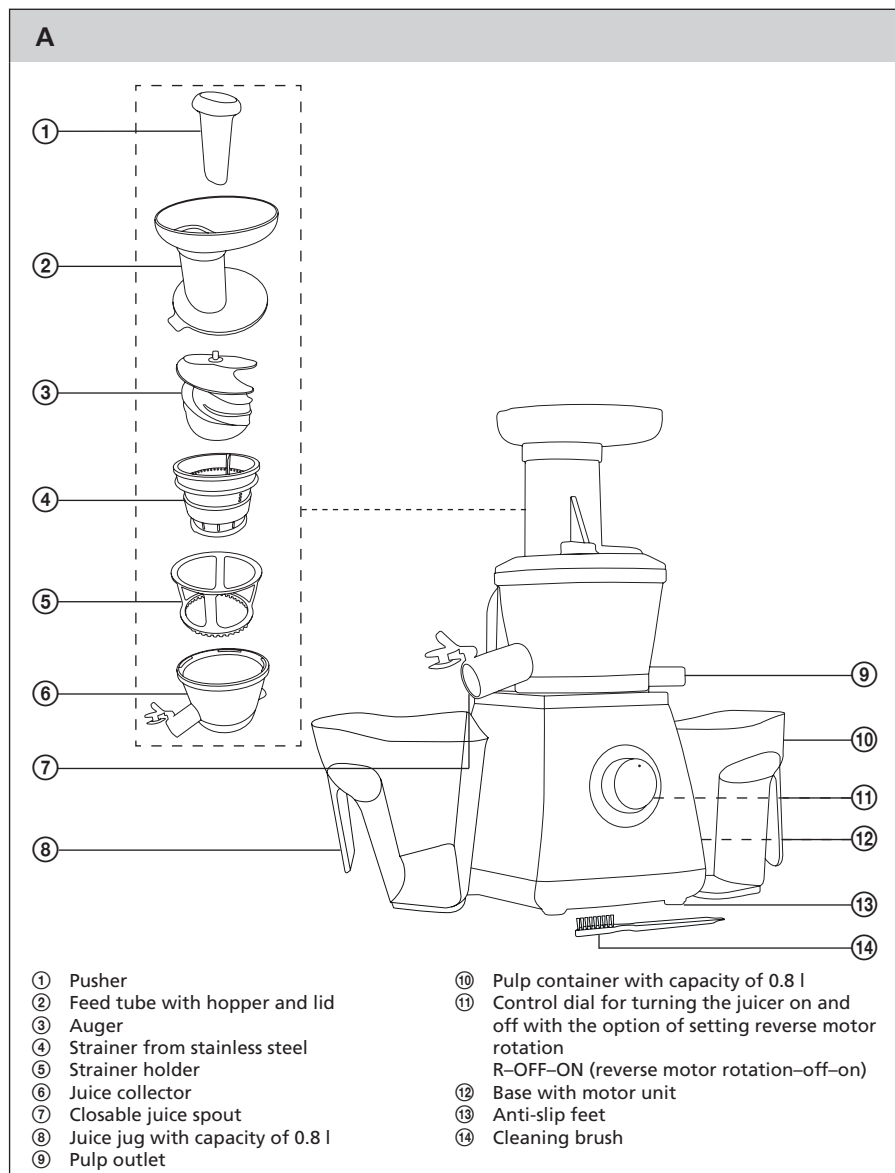

EN-5

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

## THE PRINCIPLE AND ADVANTAGES OF A MASTICATING SLOW JUICER

- The operating principle of this juicer is based on a system where ingredients are juiced slowly. The auger first coarsely masticates the inserted ingredients and in the subsequent phase juice is separated from the pulp. Juice pressed out in this way contains minimal fibre content and so is characterised by a high purity, it is slower to oxidise and retains valuable vitamins and enzymes. The strainer is automatically cleaned during operation and so it is not excessively clogged and is easier to clean after use.
- This juicer is suitable for juicing both soft and hard fruits and vegetables such as citrus fruits, currants, gooseberries and other berries, apples, pears, carrots, beetroot, cucumbers, pineapple, melon, etc. It can even handle leafy vegetables, however we recommend to process them together with other fruits and vegetables.
- It is not particularly suitable for juicing purely leafy vegetables, overripe fruits or floury apples.

## BEFORE FIRST USE

1. Remove all packaging materials from the appliance and its accessories.
2. Thoroughly wash all removable parts (pusher A①, feed tube with hopper and lid A②, auger A③, stainless steel strainer A④, strainer holder A⑤, juice collector A⑥, the juice jug A⑧ and pulp container A⑩) that come into contact with food in warm water using kitchen detergent. Then rinse all these parts under clean running water and thoroughly wipe dry with a fine wiping cloth.



### Attention:

No part of this juicer is designed to be washed in a dishwasher.

## ASSEMBLING THE JUICER

1. Place the base A⑫ on an even, dry and stable surface. During assembly, the appliance must be turned off and disconnected from the el. power socket.
2. Pick up the juice collector A⑥ and turn it upside down. There is a black silicone plug on the bottom of the collector at the pulp outlet A⑨. To prevent pulp from escaping out off the outlet A⑨, it is necessary to properly seal the hole at the outlet A⑨ with the silicone plug.



### Note:

To enable easier cleaning, the plug A⑨ has a hole with a silicone plug.

3. Put the juice collector A⑥ to its correct position. Place it on the base A⑫ so that the projections on the top side of the base A⑫ slide into the holes on the bottom of the juice collector A⑥. Turn the juice collector A⑥ clockwise to firmly connect it to the base A⑫. When the juice collector A⑥ is correctly attached to the base A⑫, it cannot be lifted up separately.
4. Insert the stainless steel strainer A④ into the holder A⑤.
5. Into the juice collector A⑥, place the holder A⑤ with the inserted strainer A④ so that the symbol "●" on the strainer A④ is in alignment with the same symbol marked on the juice collector A⑥. Push the holder A⑤ with the strainer A④ downwards.
6. Insert the auger A③ into the strainer A④ and push it downwards. A correctly seated auger A③ is signalled by an audible click.
7. Place the feed tube with hopper and lid A② on to the juice collector A⑥. If the hopper is removed from the feed tube A②, first connect these two parts. Make sure that the open lock symbol marked on the lid A② is aligned with the "●" symbol on the juice collector A⑥. Then turn the feed tube A② clockwise all the way. This will secure the lid A② on the juice collector A⑥. The "●" symbol marked on the juice collector A⑥ will now be aligned with the closed lock symbol on the lid A②.
8. Insert the pusher A① into the feed tube A②.

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

EN

## USING THE JUICER

1. Make sure that the juicer is correctly assembled and then connect it to the el. power socket. The juicer is equipped with a safety mechanism that prevents it from being started unless the lid is correctly secured in the correct position.
2. Place the juice jug A⑧, a glass or another suitable container below the juice spout A⑦. Open the lock of the juice spout A⑦ so that the juiced juice can flow freely out of the juice collector A⑥. Place the pulp container A⑩ below the pulp outlet A⑨.
3. Prepare the fruit or vegetables. Thoroughly wash the ingredients and cut them up into pieces that will pass through the feed tube A②. Remove hard stones that are contained in, for example, apricots, peaches, mangoes, etc. and inedible peels, e.g. from oranges, pineapples, melons, mandarins, etc.
4. Prior to starting the juicer, make sure that the lid is properly secured in the correct position. To turn on the juicer, turn the control dial A⑪ to the ON position. Take the pusher A① out of the feed tube A② hole. Gradually add the prepared ingredients into the feed tube A② and push them down using the pusher A①. You will achieve optimal results if you fill the feed tube A② gradually pushing the ingredients down gently.



### Attention:

Do not use fingers or other utensils to push ingredients through the feed tube A②. Always use the pusher A① designed for this purpose.

The maximum time of non-stop operation of this appliance is 15 minutes. Then allow it to cool down for 10 minutes.

5. If the juice jug A⑧ or pulp container A⑩ fill up during the juicing process, turn the juicer off by turning the control dial A⑪ to the OFF position, empty out the respective container and then put it back in its place. Then you can put the juicer back into operation and continue juicing.
6. When you have finished juicing, we recommend that you remove pulp remains from the juice collector A⑥. Hold the control dial A⑪ in the "R" position (reverse motor rotation) for 3–5 seconds, and then release it so that it returns to the OFF position. Repeat the entire process two to three times. You can do the same in the event that you clog up the appliance with an excessive amount of ingredients.
7. Turn the juicer off by setting the control dial A⑪ to the OFF position and disconnect it from the power socket. Prior to removing the juice jug A⑧, we recommended closing the spout A⑦ so that juice does not drip out of it.
8. Disassemble the juicer, see chapter Disassembling the juicer and clean it out according to the instructions contained in chapter Cleaning and maintenance.

## DISASSEMBLING THE JUICER

1. Before disassembling the juicer, make sure that it is turned off and disconnected from the power socket. Make sure that all parts that move during operation have stopped moving.
2. Close the juice spout A⑦ and remove the juice jug A⑧ and the pulp container A⑩. Take the pusher A① out of the feed tube A②.
3. Turn the feed tube A② anticlockwise until the open lock symbol shown on the lid A② is aligned with the "●" symbol on the juice collector A⑥ and then take it off the juice collector A⑥.
4. Remove the juice collector A⑥ with the holder A⑤, strainer A④ and auger A③ inside off the base A⑫ by turning it anticlockwise and lifting it up.



### Note:

It will be easier to take the juice collector A⑥ off the base A⑫ when the pulp remains are cleaned out after juicing, as described in point 6 in chapter Using the juicer.

5. Take the auger A③, strainer A④ and holder A⑤ out of the juice collector A⑥.

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

## USEFUL ADVICE AND TIPS

- Before you start juicing, thoroughly wash all the ingredients and cut them up into smaller pieces that will pass through the feed tube A②. Remove hard stones that are contained in, for example, apricots, peaches, mangoes, etc. and inedible peels, e.g. from oranges, pineapples, melons, mandarins, etc.
- To achieve optimal results, always process only fresh ripened fruits and vegetables. Overripe or unripe fruits and vegetables will negatively affect the resulting taste of the juice.
- If you juice fruits and vegetables of varying consistency, we recommend that you start with the softer fruits and vegetables, e.g. citruses, berries, etc. and then proceed on with harder fruits and vegetables, e.g. apples, carrot.
- Juice leafy vegetables together with other fruits and vegetables, e.g. apples, carrot, beetroot, citruses, etc. pushing them into the feed tube A② at the same time.
- Do not use the juicer for processing frozen or excessively hard ingredients, e.g. sugar cane.
- Place the ingredients into the feed tube A② gradually and push through gently with mild pressure. Do not overfill the feed tube A② and do not push the ingredients in too quickly and with excessive pressure. The process separating the juice from the pulp occurs gradually and will not be sped up by pushing ingredients in quickly.
- To prevent freshly pressed apple juice from turning brown, you can add a little lemon juice.
- To prevent losing valuable minerals, we recommended consuming the juice immediately after it is pressed.

## CLEANING AND MAINTENANCE

- Clean out the juicer after every use. Before cleaning it, make sure that the juicer is turned off, disconnected from the power socket and properly disassembled.
- Remove juice and pulp residues from the juice jug A⑧ and the pulp container A⑩. Thoroughly wash both containers A⑥ and A⑩, the pusher A①, the feed tube with hopper and lid A②, the strainer holder A⑤ and the auger A③ using warm water with kitchen detergent. Then rinse them under clean running water and thoroughly wipe dry with a fine wiping cloth.
- Thoroughly wash the strainer A④ and the juice collector A⑥ under warm running water using kitchen detergent and the included brush A⑬. If you are unsuccessful in cleaning out the small holes in the strainer A④, soak it first in warm water containing lemon juice. The pulp outlet A⑨ at the juice collector A⑥ has a hole with a silicone plug. To make cleaning easier, open the plug and clean the hole thoroughly. Do not forget to properly seal the plug after cleaning it. Then to finish off, rinse the strainer A④ and the juice collector A⑥ under clean running water and thoroughly wipe dry with a fine wiping cloth.



### Note:

We recommend that all accessories are washed immediately after use. Dried on juice and pulp residues are far more difficult to remove and may clog the holes in the strainer A④ and reduce subsequent juicing efficiency.

- For cleaning the base A⑫ use a cloth lightly dipped in a weak solution of water and neutral kitchen detergent. Then wipe the surface of the base A⑫ with a clean dampened cloth and dry thoroughly. Never submerge the base A⑫ in water.
- Do not use abrasive cleaning products, solvents, thinners, etc. Otherwise the surface of the appliance may be damaged.



### Attention:

No part of this juicer is designed to be washed in a dishwasher.

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

EN

## STORAGE

- When not using the appliance, store it in a dry place out of children's reach. You can store the appliance assembled.

## TECHNICAL SPECIFICATIONS

Rated voltage range .....	220–240 V
Rated frequency .....	50/60 Hz
Rated power input .....	400 W
Noise level .....	70 dB(A)

The declared noise emission level of the appliance is 70 dB(A), which represents the level A of acoustic power with respect to a reference acoustic power of 1 pW.

Changes to text and technical parameters are reserved.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.

# Masticating Slow Juicer

SSJ 4041BK / SSJ 4042RD / SSJ 4043WH

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-sokovnik-ssj-4041bk-akcija-cena/>