

Uputstvo za upotrebu

WHITE SHARK slušalice WGH-2444 Peacock Wireless Black




Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/white-shark-slusalice-wgh-2444-peacock-wireless-black-akcija-cena/>

UPUTE

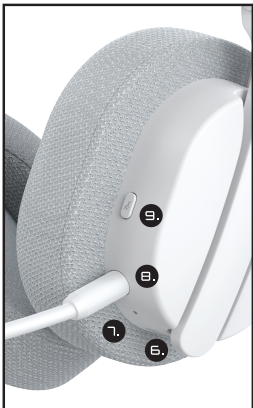

1. LED Indikator: Bijeli LED - 2.4G način rada
Plavi LED - BT način rada
2. + tipka
* Jedan klik: Pojačavanje zvuka
* Dugi pritisak: pojačavanje do Max. glasnoće
* Dupli klik: sljedeća pjesma
3. Tipka za uključivanje/isključivanje.
* Dugi pritisak 3 sekunde: on/off
* Dupli klik: Prebacivanje Gaming mode / Music mode
* Jedan klik (dok se sluša glazba): Reprodukcijska/Pauza
* Jedan klik (za vrijeme dolaznog poziva): javljanje na poziv, jedan klik za prekid poziva
* Dugi pritisak 3 sekunde (za vrijeme dolaznog poziva): Odbijanje poziva
* Trostruki klik: Siri glasovni asistent
4. - tipka.
* Jedan klik: Stišavanje zvuka
* Dugi pritisak: stišavanje do min. glasnoće
* Dupli klik: prethodna pjesma
5. Prekidač načina rada.
* Gore: 2.4G način.
* Dolje: BT način.
6. Type-C sučelje za punjenje i 3.5mm Audio sučelje.
7. Ugrađeni mikrofoni
8. Odvojivi mikrofoni
9. MIC tipka
Jedan klik: Uključivanje/isključivanje mikrofona
Dupli klik: Prisilno otpajanje veze / ponovno uparivanje

Glasovne poruke:

- * Glasovna obavijest o praznoj bateriji aktivirat će se 20 minuta prije isključivanja slušalice. Oglasit će se 3 zvučna signala svakih 5 minuta, tako da će zadnjih 20 minuta biti 4 podsjetnika, * Jedan zvučni signal: mikrofoni isključeni
- * Dva zvučna signala: mikrofoni uključeni, * Jedan zvučni signal: Max. glasnoća
- * Ženski glas za uključivanje/isključivanje slušalice

Napomene:

Kako bi slušalice nastavile raditi bežično tijekom punjenja, korisnici prvo moraju priključiti USB kabel na izvor napajanja, a zatim ga priključiti na Type-C sučelje slušalice. U suprotnom, ako prvo priključite Type-C na slušalice, slušalice će se ugasiti i prebaciti se na žičani način rada.

USER MANUAL



1. LED Indicator: White LED - 2.4G Mode
Blue LED - BT Mode
2. + key
* Single click: Volume +
* Long press: until to Max. Volume
* Double click: next song
3. Power key.
* Long press 3 Seconds: Power on/off
* Double click: Switch between Gaming mode and Music mode
* Single click(when playing music): Play/Pause
* Single click(when there is an incoming call): pick up the call, single click again to hang up the call
* Long press 3 Seconds(when there is an incoming call): Reject the call
* Triple click: Siri Voice assistant
4. - key.
* Single click: Volume -
* Long press: until to min. volume
* Double click: previous song
5. Mode switch.
* Up: 2.4G Mode.
* Down: BT Mode.
6. Type-C Charging port and 3.5mm Audio port.
7. Built-in microphone pick up port
8. Detachable microphone
9. MIC Key
Single click: Turn on/off Microphone
Double click: Force to disconnect/re-plug

Prompt voice:

- * Low battery voice prompt will be activated 20 minutes before headset power off. It will be 3 beeps every 5 minutes, so 20 minutes will have 4 times reminder, * One beep: microphone mute
- * Two beep: microphone on, * One beep: max. volume
- * female voice: power on/off

Remarks:

To support headset is working while charging feature, users must plug USB cable to source power firstly, then plug headset Type-C to headset. Otherwise if plug Type-C to headset firstly, headset will power off and switch to wired mode automatically.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda White Shark, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/white-shark-slusalice-wgh-2444-peacock-wireless-black-akcija-cena/>