

Uputstvo za upotrebu (EN)

DELL bežična tastatura Multi-Device KB740 EN(US)



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/dell-bezicna-tastatura-multi-device-kb740-enus-akcija-cena/>

Dell Compact Multi-Device Wireless Keyboard




KB740

User's Guide

Keyboard Model: KB740
Regulatory Model: KB7120Wc/RG-1216



Notes, Caution, and Warnings

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2022 Dell Inc. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.


2022 – 03

Rev. A00

Contents

What's in the box	4
Features	5
Top view/Bottom view5
Dell Peripheral Manager	6
Setting up your wireless keyboard	7
Pairing your wireless keyboard	9
Pairing with a Dell Universal USB receiver9
Pairing your wireless keyboard using Bluetooth	10
Pairing device three using Bluetooth	12
Specifications	14
Troubleshooting	15
Statutory information	18

What's in the box

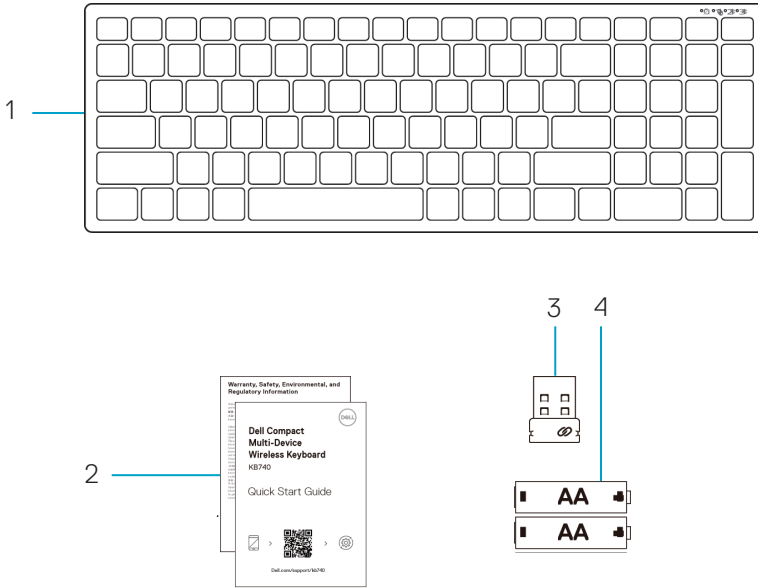

- 1 Wireless keyboard
- 2 Documents


- 3 Dell Universal USB receiver
- 4 AA-type batteries (2)




Features

Keyboard

Top view

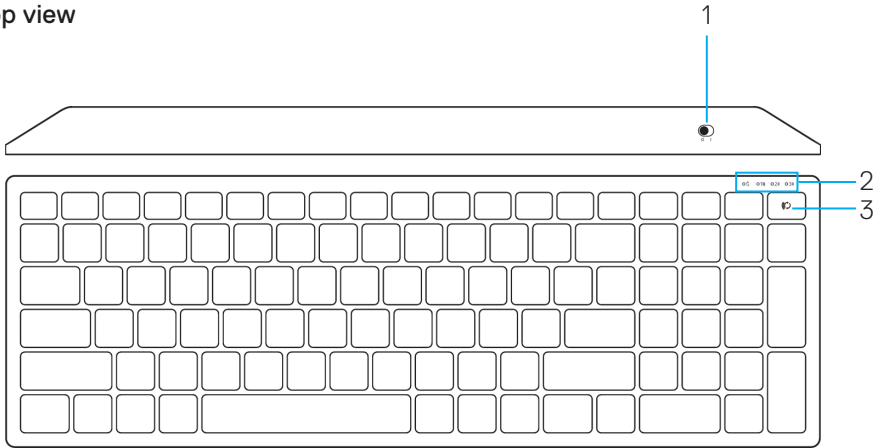

Bottom view

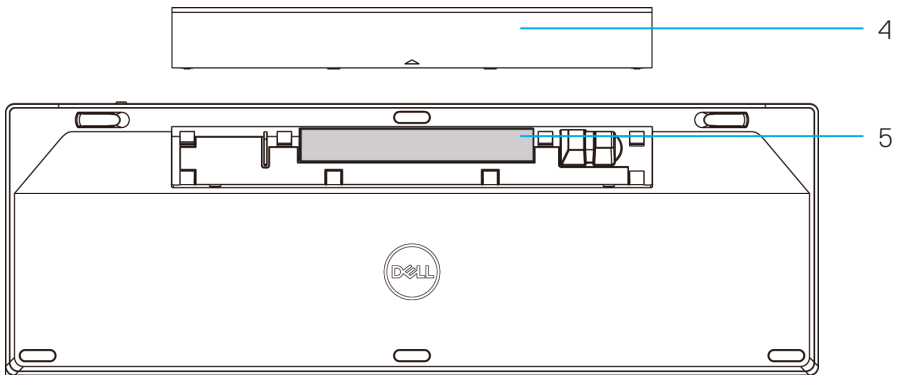

- | | | | |
|---|---|---|---------------|
| 1 | Power switch | 4 | Battery cover |
| 2 | Connection-mode lights | 5 | PPID label |
| | <ul style="list-style-type: none">• White LED Blinking: Device is not connected to computer• LED Lighting Solid White: Device is connected to computer• Amber LED Blinking: Device battery is low | | |
| 3 | Connection-mode switch button | | |



Dell Peripheral Manager

Dell Peripheral Manager software enables you to perform the following:


- Assign program shortcuts to device programmable buttons or keys through the **Action** tab.
- View device information such as firmware version and battery status through the **Info** tab.
- Upgrade the latest firmware updates on your devices.
- Pair additional devices through the Dell Universal USB receiver or directly to your computer through Bluetooth.

For more information, see *Dell Peripheral Manager User's Guide* on the product page at **www.dell.com/support**




Setting up your wireless keyboard


1. Remove the battery cover.

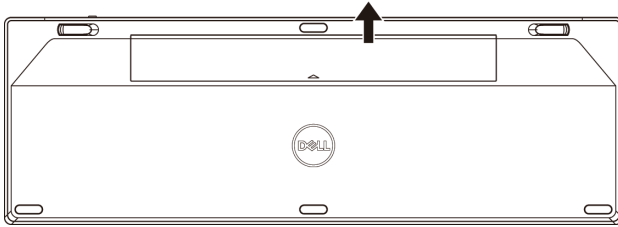


2. Install the AA batteries into the battery compartment.

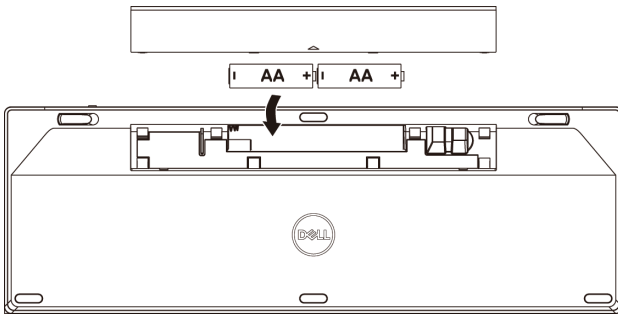


3. Replace the battery cover.

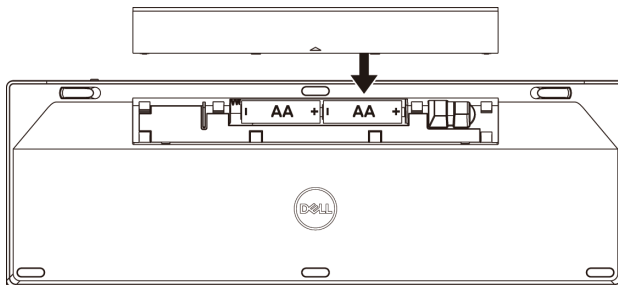

4. Slide the power switch to the right to turn on the keyboard.

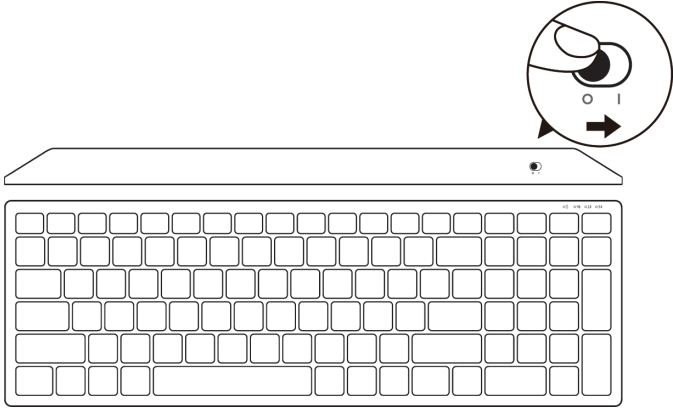


 **NOTE:** Ensure that the distance between your computer and keyboard is within ten meters.



Pairing your wireless keyboard


Your Dell wireless keyboard can be paired with devices using USB and Bluetooth. You can pair and switch between a laptop, desktop, and a compatible mobile device.

Pairing with a Dell Universal USB receiver


 **NOTE:** You can connect a device to your wireless keyboard using the Dell Universal pairing.

1. Install the Dell Universal USB receiver to the USB port on your computer.


 **NOTE:** The RF device is already paired at the factory.

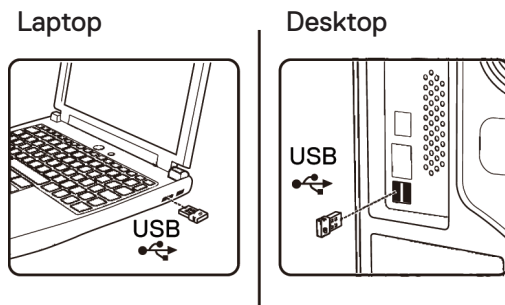

2. The connection-mode light on the keyboard is set to Dell Universal Pairing by default.

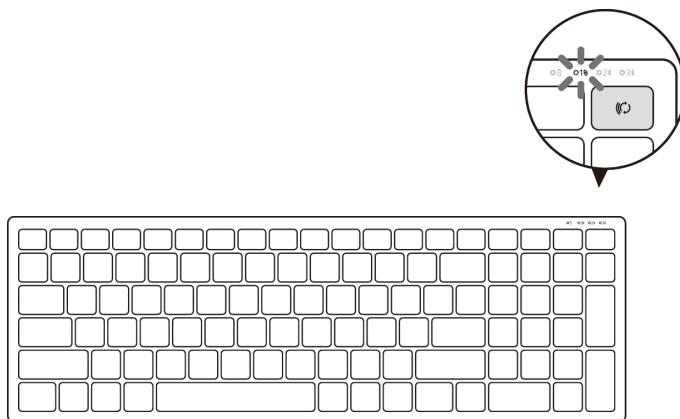


3. The keyboard is paired with your USB device.

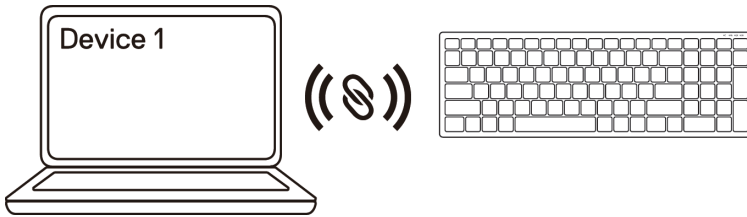

Pairing your wireless keyboard using Bluetooth

You can connect up to two devices to your wireless keyboard using Bluetooth.

1. Press the connection-mode button twice on your keyboard (within 3 seconds) until the connection-mode light (2) turns on indicating that the second-Bluetooth connection is selected.

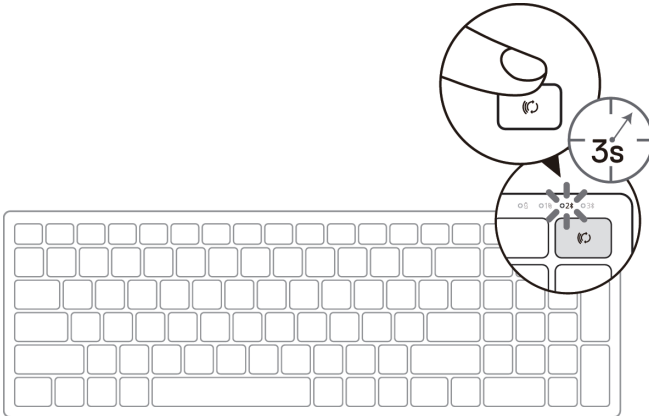


2. Pair your keyboard with your Bluetooth-enabled computer.
 - a. In Windows Search, type **Bluetooth**.
 - b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
 - c. Click **Bluetooth & other devices**. Ensure that the Bluetooth is turned on.
 - d. From the list of devices, click **Dell Keybd**.




3. Confirm the pairing process on both keyboard and device.


The second-bluetooth connection light turns solid white for 3 seconds to confirm the connection is established, and then turns off. After the keyboard and a device are paired, they connect automatically when Bluetooth is enabled and they are within the Bluetooth range.

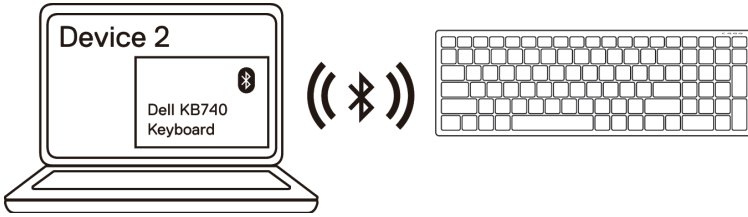


Pairing device three using Bluetooth

 **NOTE:** You can connect a third device to your wireless keyboard using Bluetooth.

1. Press the connection-mode button twice on your keyboard (within 3 seconds) until the connection-mode light (3s) turns on indicating that the third-Bluetooth connection is selected.

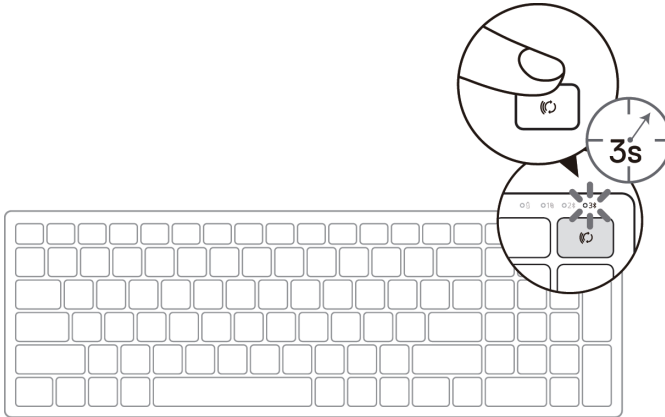


2. Pair your keyboard with your Bluetooth enabled computer.
 - a. In Windows Search, type **Bluetooth**.
 - b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
 - c. Click **Bluetooth & other devices**. Ensure that the Bluetooth is turned on.
 - d. From the list of devices, click **Dell Keybd**.

 **NOTE:** If Keyboard KB740 is not listed, press the Bluetooth-pairing button on the keyboard to ensure pairing mode is enabled.



3. Confirm the pairing process on both keyboard and device.

The third-Bluetooth connection light turns solid white for 3 seconds to confirm the connection is established then turns off. After the keyboard and a device are paired, they connect automatically when Bluetooth is enabled and they are within the Bluetooth range.

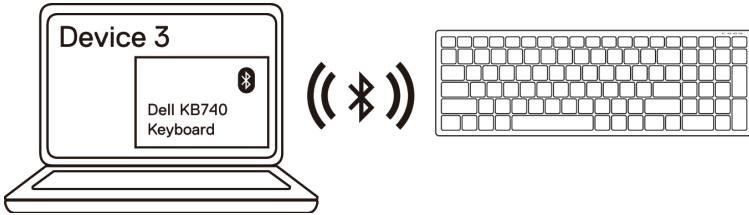

Specifications

General

Keyboard model number	KB740
Connection type	2.4 GHz Wireless and Bluetooth dual mode technology
Supported operating systems (2.4 GHz)	<ul style="list-style-type: none">• Windows 11/10/8/7/XP/Vista Server 2003/Server 2008/Server 2012• Linux 6.x, Ubuntu, Free DOS• Chrome and Android• MAC OS
Supported operating systems (Bluetooth)	<ul style="list-style-type: none">• Windows 11/10/8• Chrome and Android• MAC OS

Electrical

Operating voltage	2.2 V – 3.0 V
Battery required	Two AA alkaline
Radio transmission	Bi-directional communication
Battery required Range	Up to 10 m

Physical characteristics

Weight (without battery)	500.90 g
Dimensions:	
• Length	122 mm (4.80 in.)
• Width	363.40 mm (14.31 in.)
• Height	35.52 mm (1.40 in.)

Environmental

Temperature:	
• Operating	0°C to 40°C (32°F to 104°F)
• Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	95% maximum relative humidity; non-condensing



Troubleshooting

Problems	Possible causes	Possible solutions
Unable to use the keyboard	The white LED indicator at top of the keyboard does not light up when the keyboard is turned on	<ol style="list-style-type: none">1. Check if the battery is inserted correctly. Battery “+” and “-“ ends must follow those indicated on the battery compartment label.2. Check the battery level.<ul style="list-style-type: none">• If the keyboard uses a rechargeable battery, ensure that the battery is fully charged.• If the battery is exhausted, replace it with a new one.3. Turn the keyboard off, and then turn on again. Check if the battery-status light is flashing amber, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.4. Ensure that the Dell Universal USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on.5. Change the USB port. Insert the Dell Universal USB receiver into another USB port on your computer.



Problems	Possible causes	Possible solutions
Unable to pair the keyboard with the computer using Bluetooth	The Bluetooth icon on the computer does not light up when connecting the keyboard to the computer.	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> · If the keyboard uses a rechargeable battery, ensure that the battery is fully charged. · If the battery is exhausted, replace it with a new one. 2. Turn the keyboard off, and then turn it on again. Check if the battery-status light is flashing amber, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on. 3. Restart your computer. 4. Check the operating system is Windows 11/10/8 and Chrome/Android. 5. Ensure that the keyboard is set to Bluetooth Low Energy (BLE) mode in your computer. For more information, see the documentation that came with your computer. 6. Turn off then on, and then turn on the Bluetooth. Low Energy (BLE) mode in your computer. For more information, see the documentation that came with your computer.



Problems	Possible causes	Possible solutions
Unable to pair the keyboard with the computer	Wireless pairing error message is received while pairing the keyboard with the computer	<ol style="list-style-type: none"> 1. Turn the keyboard off, and then turn it on again. Check if the battery-status light is flashing amber ten times, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on. 2. Restart your computer.
Wireless connection is lost	Previously paired keyboard no longer works on the computer	<ol style="list-style-type: none"> 1. Ensure that the Dell Universal USB receiver is connected directly to your computer. Avoid using the port replicators, USB hubs, and so on. 2. Change the USB port. Insert the USB receiver into another USB port on your computer.



Statutory information

Warranty

Limited warranty and return policies

Dell-branded products carry three-year limited hardware warranty. If purchased together with a Dell system, it will follow the system warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Dell.com/terms](https://www.dell.com/terms). This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty—full details of the Dell end user contract and warranty terms can be found by going to [Dell.com](https://www.dell.com), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty—full details of Dell's warranty terms can be found by going to [Dell.com](https://www.dell.com), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Dell, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/dell-bezicna-tastatura-multi-device-kb740-enus-akcija-cena/>